



# **NVIDIA ConnectX-5 InfiniBand/Ethernet Adapter Cards User Manual**

# Table of Contents

<b>1</b>	<b>Introduction .....</b>	<b>7</b>
1.1	Products Overview .....	7
1.2	OCP Spec 2.0 Stacking Heights.....	7
1.2.1	OCP Spec 2.0 Type 1 Stacking Height.....	7
1.2.2	OCP Spec 2.0 Type 2 Stacking Height.....	8
1.3	Features and Benefits .....	8
1.4	Multi-Host Technology .....	10
1.5	Operating Systems/Distributions .....	10
1.6	Connectivity .....	10
<b>2</b>	<b>Interfaces.....</b>	<b>11</b>
2.1	InfiniBand Interface.....	11
2.2	Ethernet QSFP28 Interface .....	11
2.3	PCI Express Interface .....	11
2.4	LED Interface .....	11
2.5	InfiniBand Interface.....	12
2.6	Ethernet QSFP28 Interfaces .....	12
2.7	PCI Express Interface .....	12
2.8	LED Interface .....	12
2.9	SMBus Interface .....	13
2.10	Voltage Regulators .....	13
<b>3</b>	<b>Hardware Installation.....</b>	<b>14</b>
3.1	Safety Warnings .....	14
3.2	Installation Procedure Overview .....	15
3.3	System Requirements.....	15
3.3.1	Hardware Requirements.....	15
3.3.2	Airflow Requirements.....	16
3.3.3	Software Requirements.....	17
3.4	Unpacking the Product .....	17
3.5	Bracket Replacement Instructions.....	18
3.6	Installation Instructions .....	18
3.7	Cables and Modules .....	19
3.8	Identifying the Card in Your System.....	20

3.9	Uninstalling the Card .....	21
3.9.1	Safety Precautions .....	21
3.9.2	Card Removal .....	21
<b>4</b>	<b>Driver Installation .....</b>	<b>22</b>
4.1	Windows Driver Installation .....	22
4.1.1	Software Requirements.....	22
4.1.2	Downloading WinOF-2 Driver .....	22
4.1.3	Installing WinOF-2 Driver.....	23
4.1.3.1	Attended Installation.....	23
4.1.3.2	Unattended Installation .....	32
4.1.4	Firmware Upgrade.....	37
4.2	Linux Driver Installation.....	37
4.2.1	Prerequisites .....	37
4.2.2	Downloading NVIDIA OFED.....	37
4.3	VMware Driver Installation .....	52
4.3.1	Hardware and Software Requirements.....	52
4.3.2	Installing NATIVE ESXi Driver for VMware vSphere .....	52
4.3.3	Removing Earlier NVIDIA Drivers .....	53
4.3.4	Firmware Programming.....	53
4.4	Linux Driver Installation.....	54
4.4.1	Prerequisites .....	54
4.4.2	Downloading NVIDIA OFED.....	54
4.5	Windows Driver Installation .....	54
4.5.1	Software Requirements.....	54
4.5.2	Downloading WinOF-2 Driver .....	55
4.5.3	Installing WinOF-2 Driver.....	55
4.5.3.1	Attended Installation.....	55
4.5.3.2	Unattended Installation .....	61
4.5.4	Firmware Upgrade.....	62
<b>5</b>	<b>Updating Adapter Firmware .....</b>	<b>63</b>
<b>6</b>	<b>Troubleshooting.....</b>	<b>64</b>
6.1	General Troubleshooting .....	64
6.2	Linux Troubleshooting .....	64
6.3	Windows Troubleshooting.....	65
<b>7</b>	<b>Specifications .....</b>	<b>66</b>

7.1	MCX555A-ECAT Specifications .....	66
7.2	MCX556A-ECAT/MCX556A-ECUT Specifications .....	67
7.3	MCX556A-EDAT Specifications .....	68
7.4	Airflow Specifications .....	69
7.5	LED Specifications.....	69
7.6	Board Mechanical Drawings and Dimensions .....	69
7.6.1	Adapter Card Mechanical Drawing (Component Side) .....	69
7.6.2	Bracket Mechanical Drawing.....	69
<b>8</b>	<b>Monitoring .....</b>	<b>70</b>
<b>9</b>	<b>Finding the GUID_MAC and Serial Number on the Adapter Card .....</b>	<b>71</b>
9.1	MCX555A-ECAT board label example: .....	71
9.2	MCX556A-ECAT board label example .....	72
9.3	MCX556A-ECUT board label example:.....	72
9.4	MCX556A-EDAT board label example: .....	73
<b>10</b>	<b>Document Revision History .....</b>	<b>74</b>

## About This Manual

This User Manual describes NVIDIA® ConnectX®-5 and ConnectX®-5 Ex InfiniBand/Ethernet Single and Dual QSFP28 port PCI Express x16 adapter cards. It provides details as to the interfaces of the board, specifications, required software and firmware for operating the board, and relevant documentation.

## EOL'd (End of Life) Ordering Part Numbers

The table below provides the ordering part numbers (OPN) for ConnectX-5 InfiniBand/Ethernet adapter cards.

IC in Use	NVIDIA SKU	Legacy OPN	Marketing Description
ConnectX®-5	900-9X5AD-016-ST0	MCX555A-ECAT	ConnectX®-5 InfiniBand/Ethernet adapter card, <b>EDR IB</b> (100Gb/s) and 100GbE, <b>single</b> -port QSFP28, <b>PCIe 3.0</b> x16, tall bracket
	900-9X5AD-0056-ST8	MCX556A-ECAT	ConnectX®-5 InfiniBand/Ethernet adapter card, <b>EDR IB</b> (100Gb/s) and 100GbE, <b>dual</b> -port QSFP28, <b>PCIe 3.0</b> x16, tall bracket
	900-9X5AD-0056-ST9	MCX556A-ECUT	ConnectX®-5 InfiniBand/Ethernet adapter card, <b>EDR IB</b> (100Gb/s) and 100GbE, <b>dual</b> -port QSFP28, <b>PCIe3.0</b> x16, <b>UEFI enabled</b> , tall bracket
ConnectX®-5 Ex	900-9X5AD-0056-STB	MCX556A-EDAT	ConnectX®-5 <b>Ex</b> InfiniBand/Ethernet adapter card, <b>EDR IB</b> (100Gb/s) and 100GbE, <b>dual</b> -port QSFP28, <b>PCIe 4.0</b> x16, tall bracket

## Intended Audience

This manual is intended for the installer and user of these cards. The manual assumes basic familiarity with InfiniBand and Ethernet network and architecture specifications.

## Technical Support

Customers who purchased NVIDIA products directly from NVIDIA are invited to contact us through the following methods:

- URL: <https://www.nvidia.com> > Support
- E-mail: [enterprisesupport@nvidia.com](mailto:enterprisesupport@nvidia.com)

Customers who purchased NVIDIA Global Support Services, please see your contract for details regarding Technical Support.

Customers who purchased NVIDIA products through an NVIDIA-approved reseller should first seek assistance through their reseller.

## Related Documentation

MLNX_OFED for Linux User Manual and Release Notes	User Manual describing OFED features, performance, band diagnostic, tools content, and configuration. See <a href="#">MLNX_OFED for Linux Documentation</a> .
WinOF-2 for Windows User Manual and Release Notes	User Manual describing WinOF-2 features, performance, Ethernet diagnostic, tools content, and configuration. See <a href="#">WinOF-2 for Windows Documentation</a> .

NVIDIA VMware for Ethernet User Manual	User Manual and release notes describing the various components of the NVIDIA ConnectX® NATIVE ESXi stack. See <a href="#">VMware® ESXi Drivers Documentation</a> .
NVIDIA Firmware Utility (mlxup) User Manual and Release Notes	NVIDIA firmware update and query utility used to update the firmware. Refer to <a href="#">Firmware Utility (mlxup) Documentation</a> .
NVIDIA Firmware Tools (MFT) User Manual	User Manual describing the set of MFT firmware management tools for a single node. See <a href="#">MFT User Manual</a> .
InfiniBand Architecture Specification Release 1.2.1, Vol 2 - Release 1.3	<a href="#">InfiniBand Specifications</a>
IEEE Std 802.3 Specification	<a href="#">IEEE Ethernet Specifications</a>
PCI Express Specifications	Industry Standard PCI Express Base and Card Electromechanical Specifications. Refer to <a href="#">PCI-SIG Specifications</a> .
LinkX Interconnect Solutions	LinkX InfiniBand cables and transceivers are designed to maximize the performance of High-Performance Computing networks, requiring high-bandwidth, low-latency connections between compute nodes and switch nodes. NVIDIA offers one of the industry's broadest portfolio of QDR/FDR10 (40Gb/s), FDR (56Gb/s), EDR/HDR100 (100Gb/s), HDR (200Gb/s) and NDR (400Gb/s) cables, including Direct Attach Copper cables (DACs), copper splitter cables, Active Optical Cables (AOCs) and transceivers in a wide range of lengths from 0.5m to 10km. In addition to meeting IBTA standards, NVIDIA tests every product in an end-to-end environment ensuring a Bit Error Rate of less than 1E-15. Read more at <a href="#">LinkX Cables and Transceivers</a> .

## Document Conventions

When discussing memory sizes, MB and MBytes are used in this document to mean size in mega Bytes. The use of Mb or Mbits (small b) indicates size in mega bits. IB is used in this document to mean InfiniBand. In this document PCIe is used to mean PCI Express.

# 1 Introduction

This is the User Guide for Ethernet adapter cards based on the ConnectX®-5 InfiniBand/Ethernet integrated circuit device for OCP Spec 2.0. These adapters connectivity provide the highest performing low latency and most flexible interconnect solution for PCI Express Gen 3.0/4.0 servers used in Enterprise Data Centers and High-Performance Computing environments.

The following provides the ordering part number, port speed, number of ports, and PCI Express speed.

## 1.1 Products Overview

Model	ConnectX-5 InfiniBand/Ethernet Cards for OCP Spec 2.0			
Part Number	MCX545A-ECAN	MCX545B-ECAN	MCX545M-ECAN	MCX546A-EDAN
OCP Spec 2.0 Type	<a href="#">Type 2 Stacking Height</a>	<a href="#">Type 1 Stacking Height</a>	<a href="#">Type 2 Stacking Height</a>	<a href="#">Type 2 Stacking Height</a>
Single/Multi-Host	Single-Host		Multi-Host	Single-Host
Host Management	✓	✓	✓	✓
Network Connector Type	Single-port QSFP28			Dual-port <b>belly-to-belly</b> QSFP28
Data Rate	InfiniBand/InfiniBand/Ethernet: SDR/DDR/QDR/FDR/EDR			
	Ethernet: 10/25/40/50/100 Gb/s			
PCI Express Connectors	PCIe Gen 3.0 x16 SERDES @ 8.0GT/s			PCIe Gen 3.0 / 4.0 x16 SERDES @ 8.0GT/s / 16.0GT/s
Dimensions	PCIe Half Height, Half Length 3.07 in. x 4.33 in (78.00mm x 110.05mm)			
RoHS	RoHS Compliant			
IC Part Number	MT28808A0-FCCF-EV			
Device ID	4119 for Physical Function (PF) 4120 for Virtual Function (VF)			4121 for Physical Function (PF) 4122 for Virtual Function (VF)


For more detailed information see [Specifications](#).

## 1.2 OCP Spec 2.0 Stacking Heights

### 1.2.1 OCP Spec 2.0 Type 1 Stacking Height

This section applies to MCX542A-ACAN.


The single-port 100Gb/s adapter card complies with OCP Spec 2.0 Type 1 with 8mm stacking height.

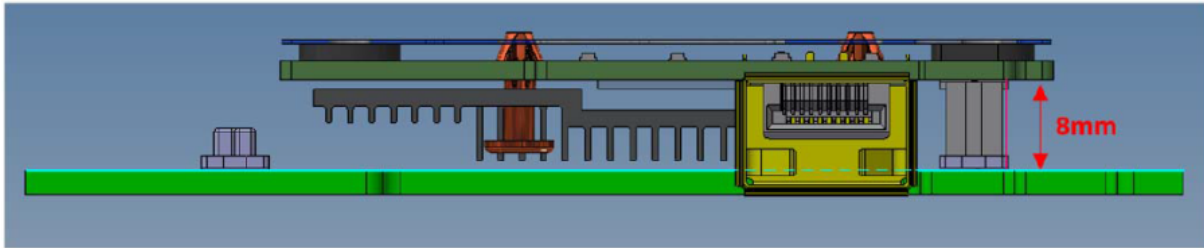

### 1.2.2 OCP Spec 2.0 Type 2 Stacking Height

This figure applies to MCX545A-ECAN, MCX545M-ECAN.

The single-port 100Gb/s adapter cards follow OCP Spec 2.0 Type 2 with 12mm stacking height.  
Single-port Card

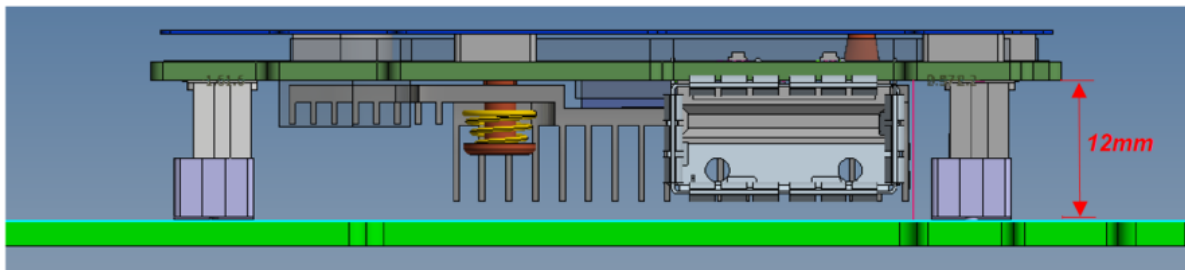

## 1.3 Features and Benefits

This section describes hardware features and capabilities. Please refer to the relevant driver and/or firmware release notes for feature availability.

Feature	Description
PCI Express (PCIe)	Uses PCIe Gen 3.0 (8GT/s) or Gen 4.0 (16GT/s) through x16 lanes. Gen 1.1 and 2.0 compatible.
100Gb/s InfiniBand/ Ethernet Adapter	ConnectX-5 offers the highest throughput InfiniBand/Ethernet adapter, supporting EDR 100Gb/s InfiniBand and 100Gb/s Ethernet and enabling any standard networking, clustering, or storage to operate seamlessly over any converged network leveraging a consolidated software stack.
InfiniBand EDR	A standard InfiniBand data rate, where each lane of a 4X port runs a bit rate of 25.78125Gb/s with a 64b/66b encoding, resulting in an effective bandwidth of 100Gb/s.


Up to 100 Gigabit Ethernet	NVIDIA adapters comply with the following IEEE 802.3 standards: <ul style="list-style-type: none"> <li>• 100GbE / 50GbE / 40GbE / 25GbE / 10GbE / 1GbE • IEEE 802.3bj, 802.3bm 100 Gigabit Ethernet • IEEE 802.3by, Ethernet Consortium25, 50 Gigabit Ethernet, supporting all FEC modes • IEEE 802.3ba 40 Gigabit Ethernet • IEEE 802.3by 25 Gigabit Ethernet • IEEE 802.3ae 10 Gigabit Ethernet • IEEE 802.3ap based auto-negotiation and KR startup • Proprietary Ethernet protocols (20/40GBASE-R2, 50GBASE-R4) • IEEE 802.3ad, 802.1AX Link Aggregation • IEEE 802.1Q, 802.1P VLAN tags and priority • IEEE 802.1Qau (QCN) • Congestion Notification • IEEE 802.1Qaz (ETS) • IEEE 802.1Qbb (PFC) • IEEE 802.1Qbg • IEEE 1588v2 • Jumbo frame support (9.6KB)</li> </ul>
Memory	<ul style="list-style-type: none"> <li>• SPI - includes 128Mb SPI Flash device (W25Q128FVSIQ by WINBOND-NUVOTON).</li> <li>• FRU EEPROM capacity is 2Kb. FRU I2C address is (0x50) and is accessible through the PCIe SMBus. Note: Address 0x58 is reserved.)</li> </ul>
Overlay Networks	In order to better scale their networks, data center operators often create overlay networks that carry traffic from individual virtual machines over logical tunnels in encapsulated formats such as NVGRE and VXLAN. While this solves network scalability issues, it hides the TCP packet from the hardware offloading engines, placing higher loads on the host CPU. ConnectX-5 effectively addresses this by providing advanced NVGRE and VXLAN hardware offloading engines that encapsulate and de-capsulate the overlay protocol.
RDMA and RDMA over Converged Ethernet (RoCE)	ConnectX-5, utilizing IBTA RDMA (Remote Data Memory Access) and RoCE (RDMA over Converged Ethernet) technology, delivers low-latency and high-performance over Band and Ethernet networks. Leveraging data center bridging (DCB) capabilities as well as ConnectX-5 advanced congestion control hardware mechanisms, RoCE provides efficient low-latency RDMA services over Layer 2 and Layer 3 networks.
NVIDIA PeerDirect™	PeerDirect™ communication provides high-efficiency RDMA access by eliminating unnecessary internal data copies between components on the PCIe bus (for example, from GPU to CPU), and therefore significantly reduces application run time. ConnectX-5 advanced acceleration technology enables higher cluster efficiency and scalability to tens of thousands of nodes.
CPU Offload	Adapter functionality enabling reduced CPU overhead allowing more available CPU for computation tasks. Open vSwitch (OVS) offload using ASAP <sup>2</sup> (™) • Flexible match-action flow tables • Tunneling encapsulation/decapsulation
Quality of Service (QoS)	Support for port-based Quality of Service enabling various application requirements for latency and SLA.
Hardware-based I/O Virtualization	ConnectX-5 provides dedicated adapter resources and guaranteed isolation and protection for virtual machines within the server.
Storage Acceleration	A consolidated compute and storage network achieves significant cost-performance advantages over multi-fabric networks. Standard block and file access protocols can leverage RDMA for high-performance storage access. • NVMe over Fabric offloads for the target machine • Erasure Coding • T10-DIF Signature Handover
SR-IOV	ConnectX-5 SR-IOV technology provides dedicated adapter resources and guaranteed isolation and protection for virtual machines (VM) within the server.
NC-SI	The adapter supports a Network Controller Sideband Interface (NC-SI), MCTP over SMBus and MCTP over PCIe - Baseboard Management Controller interface.
High-Performance Accelerations	<ul style="list-style-type: none"> <li>• Tag Matching and Rendezvous Offloads • Adaptive Routing on Reliable Transport • Burst Buffer Offloads for Background Checkpointing</li> </ul>
Wake-on-LAN (WoL)	Supported
Reset-on-LAN (RoL)	Supported

## 1.4 Multi-Host Technology

Supported in MCX545M-ECAN.

ConnectX®-5 adapter card specifically designed for supported servers implements Multi-Host technology to deliver direct and independent PCIe connections to each of the four CPUs in the server.

The ConnectX-5 PCIe x16 interface is separated into four independent PCIe x4 interfaces. Each interface is connected to a separate host with no performance degradation. Connecting server CPUs directly to the network delivers performance gain as each CPU can send and receive network traffic independently without the need to send network data to other CPUs using QPI bus.

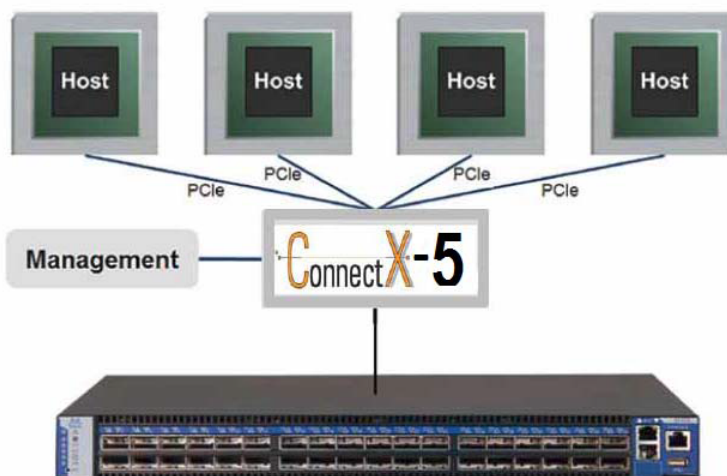

## 1.5 Operating Systems/Distributions

In MCX545M-ECAN, only OFED is supported.

- RHEL/CentOS
- Windows
- FreeBSD
- VMware
- OpenFabrics Enterprise Distribution (OFED)
- OpenFabrics Windows Distribution (WinOF-2)

## 1.6 Connectivity

- Interoperable with 1/10/25/40/50/100 Gb/s Ethernet switches
- Passive copper cable with ESD protection
- Powered connectors for optical and active cable support

---

## 2 Interfaces

### 2.1 InfiniBand Interface

The network ports of the ConnectX®-5 adapter cards are compliant with the InfiniBand Architecture Specification, Release 1.3. InfiniBand traffic is transmitted through the cards' QSFP28 connectors.

### 2.2 Ethernet QSFP28 Interface

The network ports of the ConnectX®-5 adapter card are compliant with the IEEE 802.3 Ethernet standards listed in [Features and Benefits](#). Ethernet traffic is transmitted through the cards' QSFP28 connectors.

### 2.3 PCI Express Interface

The ConnectX®-5 adapter card supports PCI Express Gen 3.0/4.0 (1.1 and 2.0 compatible) through an x16 edge connector. The device can be either a master initiating the PCI Express bus operations, or a slave responding to PCI bus operations. The following lists PCIe interface features:

- PCIe Gen4.0 and 3.0 compliant, 2.0 and 1.1 compatible
- 2.5, 5.0, or 8.0, or 16.0 GT/s link rate x16
- Auto-negotiates to x16, x8, x4, x2, or x1
- Support for MSI/MSI-X mechanisms

### 2.4 LED Interface

There is one bi-color (yellow/green) I/O LED per port to indicate link status located on the adapter card.

Physical and Logical Link Indications - Ethernet Mode:

State	LED Behavior
Beacon command for locating the card	Blinks yellow at 1Hz
Error	Blinks yellow at 4Hz until error is resolved. The reason for the error may be: <ul style="list-style-type: none"><li>• Failure of I<sup>2</sup>C access to the port</li><li>• Over-current conditions of the port</li></ul>
Link Activity	Blinks green reflecting the link speed
Link Up	Constant green light

Physical and Logical Link Indications - InfiniBand Mode:

State	LED Behavior
Beacon command for locating the card	Blinks yellow at 1Hz

Error	Blinks yellow at 4Hz until error is resolved. The reason for the error may be: <ul style="list-style-type: none"> <li>• Failure of I<sup>2</sup>C access to the port</li> <li>• Over-current conditions of the port</li> </ul>
Link Activity	Blinks green reflecting the link speed
Link Up	Constant green light

## 2.5 InfiniBand Interface

The network ports of the ConnectX®-5 adapter cards are compliant with the *InfiniBand Architecture Specification, Release 1.3*. InfiniBand traffic is transmitted through the cards' QSFP28 connectors.

## 2.6 Ethernet QSFP28 Interfaces

The network ports of the ConnectX®-5 adapter card are compliant with the IEEE 802.3 Ethernet standards listed in [Features and Benefits](#). Ethernet traffic is transmitted through the QSFP28 connectors on the adapter card.

The adapter card includes special circuits to protect from ESD shocks to the card/server when plugging copper cables.

## 2.7 PCI Express Interface

The table below describes the supported PCIe interface in ConnectX-5 adapter cards.

ConnectX-5 IC	Supported PCIe Interface	Features
ConnectX-5 Ex	PCIe Gen 3.0/4.0 (1.1 and 2.0 compatible) through x16 edge connectors	Link Rates: 2.5, 5.0, 8.0GT/s or 16GT/s. Auto Negotiation to: x16, x8, x4, x2 or x1. Support for MSI/MSI-X mechanisms.
ConnectX-5	PCIe Gen 3.0 (1.1 and 2.0 compatible) through x16 edge connectors	Link Rates: 2.5, 5.0 or 8.0GT/s. Auto Negotiation to: x16, x8, x4, x2 or x1. Support for MSI/MSI-X mechanisms.

## 2.8 LED Interface

There is one bi-color (yellow/green) I/O LED per port to indicate link status located on the adapter card.

State	LED Behavior
Beacon command for locating the card	Blinks yellow at 1Hz
Error	Blinks yellow at 4Hz until error is resolved. The reason for the error may be: <ul style="list-style-type: none"> <li>• Failure of I<sup>2</sup>C access to the port</li> <li>• Over-current conditions of the port</li> </ul>

Link Activity	Blinks green reflecting the link speed
Link Up	Constant green light

## 2.9 SMBus Interface

ConnectX-5 technology maintains support for manageability through a BMC. ConnectX-5 PCIe stand-up adapter can be connected to a BMC using MCTP over SMBus or MCTP over PCIe protocols as if it is a standard NVIDIA PCIe stand-up adapter. For configuring the adapter for the specific manageability solution in use by the server, please contact NVIDIA Support.


## 2.10 Voltage Regulators

The voltage regulator power is derived from the PCI Express edge connector 12V supply pins. These voltage supply pins feed onboard regulators that provide the necessary power to the various components on the card.

# 3 Hardware Installation







Installation and initialization of ConnectX-5 adapter cards require attention to the mechanical attributes, power specification, and precautions for electronic equipment.




## 3.1 Safety Warnings

 Safety warnings are provided here in the English language. For safety warnings in other languages, refer to the [Adapter Installation Safety Instructions](#).

Please observe all safety warnings to avoid injury and prevent damage to system components. Note that not all warnings are relevant to all models.

Note that not all warnings are relevant to all models.

	<b>General Installation Instructions</b> Read all installation instructions before connecting the equipment to the power source.
	<b>Jewelry Removal Warning</b> Before you install or remove equipment that is connected to power lines, remove jewelry such as bracelets, necklaces, rings, watches, and so on. Metal objects heat up when connected to power and ground and can meltdown, causing serious burns and/or welding the metal object to the terminals.
	<b>Over-temperature</b> This equipment should not be operated in an area with an ambient temperature exceeding the maximum recommended: 55°C (131°F). An airflow of 200LFM at this maximum ambient temperature is required for HCA cards and NICs. To guarantee proper airflow, allow at least 8cm (3 inches) of clearance around the ventilation openings.
	<b>During Lightning - Electrical Hazard</b> During periods of lightning activity, do not work on the equipment or connect or disconnect cables.
	<b>Copper Cable Connecting/Disconnecting</b> Some copper cables are heavy and not flexible, as such, they should be carefully attached to or detached from the connectors. Refer to the cable manufacturer for special warnings and instructions.
	<b>Equipment Installation</b> This equipment should be installed, replaced, or serviced only by trained and qualified personnel.

	<p><b>Equipment Disposal</b> The disposal of this equipment should be in accordance to all national laws and regulations.</p>
	<p><b>Local and National Electrical Codes</b> This equipment should be installed in compliance with local and national electrical codes.</p>
	<p><b>Hazardous Radiation Exposure</b></p> <ul style="list-style-type: none"> <li>• Caution - Use of controls or adjustment or performance of procedures other than those specified herein may result in hazardous radiation exposure. For products with optical ports.</li> <li>• CLASS 1 LASER PRODUCT and reference to the most recent laser standards: IEC 60 825-1:1993 + A1:1997 + A2:2001 and EN 60825-1:1994+A1:1996+ A2:20</li> </ul>

## 3.2 Installation Procedure Overview

The installation procedure of ConnectX-5 adapter cards involve the following steps:

Step	Procedure
1	Check the system's hardware and software requirements.
2	Pay attention to the airflow consideration within the host system.
3	Unpack the product.
4	(Optional) Replace the full-height mounting bracket with the supplied short bracket.
5	Install the adapter card in the system.
6	Connect cables or modules to the card.
7	Identify ConnectX-5 adapter card in the system.

## 3.3 System Requirements

### 3.3.1 Hardware Requirements



Unless otherwise specified, NVIDIA products are designed to work in an environmentally controlled data center with low levels of gaseous and dust (particulate) contamination.

The operation environment should meet severity level G1 as per ISA 71.04 for gaseous contamination and ISO 14644-1 class 8 for cleanliness level.

A system with a PCI Express slot of corresponding bus width is required for installing the card.

✘ For proper operation and performance, please make sure to use a PCIe slot with a corresponding bus width and that can supply sufficient power to your card. Refer to the Specifications section of the manual for more power requirements.

### 3.3.2 Airflow Requirements

 
ConnectX-5 adapter cards are offered with two airflow patterns: from the heatsink to the network ports, and vice versa, as shown below.

Please refer to the "Specifications" chapter for airflow numbers for each specific card model.

Airflow *from the heatsink* to the network ports:



Airflow *from the network ports* to the heatsink:




✘ All cards in the system should be planned with the same airflow direction.

### 3.3.3 Software Requirements


- See Operating Systems/Distributions section under the Introduction section.
- Software Stacks - NVIDIA OpenFabric software package MLNX\_OFED for Linux, WinOF-2 for Windows, and VMware. See the Driver Installation section.

 
## 3.4 Unpacking the Product

 The adapter is being installed in a system that operates with voltages that can be lethal. Before opening the case of the system, observe the following precautions to avoid injury and prevent damage to system components.

- Remove any metallic objects from your hands and wrists.
- Make sure to use only insulated tools.
- Verify that the system is powered off and is unplugged.
- It is strongly recommended to use an ESD strap or other antistatic devices.

1. Unpack the adapter package and place them on an antistatic surface, and verify you have received the following items:
  - a. ConnectX-5 Adapter Card, with a tall bracket assembled on the card.
  - b. Short bracket (accessory)
2. Check the parts for visible damage that may have occurred during shipping.

 Please note that if the card is removed hastily from the antistatic bag, the plastic ziplock may harm the EMI fingers on the networking connector. Carefully remove the card from the antistatic bag to avoid damaging the EMI fingers.




3. Shut down your system if active:

Turn off the power to the system, and disconnect the power cord. Refer to the system documentation for instructions. Before you install the ConnectX-5 card, make sure that the system is disconnected from power.

## 3.5 Bracket Replacement Instructions

The card is usually shipped with an assembled high-profile bracket. If this form factor is suitable for your requirements, you can skip the remainder of this section and move to [Installation Instructions](#). If you need to replace the high-profile bracket with the short bracket that is included in the shipping box, please follow the instructions in this section.


 Due to risk of damaging the EMI gasket, it is not recommended to replace the bracket more than three times.

To replace the bracket you will need the following parts:

- The new brackets of the proper height
- The 2 screws saved from the removal of the bracket

### Removing the Existing Bracket

1. Using a torque driver, remove the two screws holding the bracket in place.
2. Separate the bracket from the ConnectX-5 card.

 Be careful not to put stress on the LEDs on the adapter card.


3. Save the two screws.

### Installing the New Bracket

1. Place the bracket onto the card until the screw holes line up.


 Do not force the bracket onto the adapter card.

2. Screw on the bracket using the screws saved from the bracket removal procedure above.

 Use a torque driver to apply up to 2 lbs-in torque on the screws.

## 3.6 Installation Instructions

This section provides detailed instructions on how to install your adapter card in a system.

 Please note that the following figures are for illustration purposes only.

1. Before installing the card, make sure that the system is off and the power cord is not connected to the server. Please follow proper electrical grounding procedures.
2. Open the system case.

3. Place the adapter in an available PCI Express slot.



4. Applying even pressure at both corners of the card, insert the adapter card into the PCI Express slot until firmly seated.



5. When the adapter is properly seated, the port connectors are aligned with the slot opening, and the adapter faceplate is visible against the system chassis.



6. Secure the adapter with the adapter clip or screw.



To uninstall the adapter card, see [Uninstalling the Card](#).

## 3.7 Cables and Modules

### Cable Installation

1. All cables can be inserted or removed with the unit powered on.
2. To insert a cable, press the connector into the port receptacle until the connector is firmly seated.
  - a. Support the weight of the cable before connecting the cable to the adapter card. Do this by using a cable holder or tying the cable to the rack.
  - b. Determine the correct orientation of the connector to the card before inserting the connector. Do not try and insert the connector upside down. This may damage the adapter card.
  - c. Insert the connector into the adapter card. Be careful to insert the connector straight into the cage. Do not apply any torque, up or down, to the connector cage in the adapter card.
  - d. Make sure that the connector locks in place.



When installing cables make sure that the latches engage.



Always install and remove cables by pushing or pulling the cable and connector in a straight line with the card.

3. After inserting a cable into a port, the Green LED indicator will light when the physical connection is established (that is, when the unit is powered on and a cable is plugged into the port with the other end of the connector plugged into a functioning port). See [Adapter Card LED Operations](#).
4. After plugging in a cable, lock the connector using the latching mechanism particular to the cable vendor. When data is being transferred the Green LED will blink. See Adapter Card LED Operations under the Interfaces section.

5. Care should be taken as not to impede the air exhaust flow through the ventilation holes. Use cable lengths which allow for routing horizontally around to the side of the chassis before bending upward or downward in the rack.
6. To remove a cable, disengage the locks and slowly pull the connector away from the port receptacle. LED indicator will turn off when the cable is unseated.

## 3.8 Identifying the Card in Your System

### On Linux

 
Get the device location on the PCI bus by running `lspci` and locating lines with the string “Mellanox Technologies”:

```
lspci |grep -i Mellanox  
Network controller: Mellanox Technologies MT28800 Family [ConnectX-5]
```

### On Windows


1. Open Device Manager on the server. Click Start => Run, and then enter `devmgmt.msc`.
2. Expand System Devices and locate your NVIDIA ConnectX-5 adapter card.
3. Right click the mouse on your adapter's row and select Properties to display the adapter card properties window.
4. Click the Details tab and select Hardware Ids (Windows 2012/R2/2016) from the Property pull-down menu.

#### PCI Device (Example)



5. In the Value display box, check the fields VEN and DEV (fields are separated by '&'). In the display example above, notice the sub-string “PCI\VEN\_15B3&DEV\_1003”: VEN is equal to 0x15B3 - this is the Vendor ID of NVIDIA; and DEV is equal to 1018 (for ConnectX-5) - this is a valid NVIDIA PCI Device ID.

 If the PCI device does not have a NVIDIA adapter ID, return to Step 2 to check another device.

 The list of PCI Device IDs can be found at the [PCI ID repository](#).

## 3.9 Uninstalling the Card

### 3.9.1 Safety Precautions

The adapter is installed in a system that operates with voltages that can be lethal. Before uninstalling the adapter card, please observe the following precautions to avoid injury and prevent damage to system components.

1. Remove any metallic objects from your hands and wrists.
2. It is strongly recommended to use an ESD strap or other antistatic devices.
3. Turn off the system and disconnect the power cord from the server.

### 3.9.2 Card Removal

Please note that the following images are for illustration purposes only.

 Please note that the following images are for illustration purposes only.

1. Verify that the system is powered off and unplugged.
2. Wait 30 seconds.
3. To remove the card, disengage the retention mechanisms on the bracket (clips or screws).
4. Holding the adapter card from its center, gently pull the adapter card out of the PCI Express slot.
5. When the port connectors reach the top of the chassis window, gently pull the adapter card in parallel to the motherboard.

---

## 4 Driver Installation

Please use the relevant driver installation section.

- [Windows Driver Installation](#)
- [Linux Driver Installation](#)
- [VMware Driver Installation](#)

### 4.1 Windows Driver Installation

For Windows, download and install the latest WinOF-2 for Windows software package available via the NVIDIA website at: [WinOF-2 webpage](#). Follow the installation instructions included in the download package (also available from the download page).

The snapshots in the following sections are presented for illustration purposes only. The installation interface may slightly vary, depending on the operating system in use.

#### 4.1.1 Software Requirements

Description	Package
Windows Server 2022	MLNX_WinOF2-<version>_All_x64.exe
Windows Server 2019	
Windows Server 2016	
Windows Server 2012 R2	
Windows 11 Client (64 bit only)	
Windows 10 Client (64 bit only)	
Windows 8.1 Client (64 bit only)	

Note: The Operating System listed above must run with administrator privileges.

#### 4.1.2 Downloading WinOF-2 Driver



To download the .exe file according to your Operating System, please follow the steps below:

1. Obtain the machine architecture.
  - a. To go to the Start menu, position your mouse in the bottom-right corner of the Remote Desktop of your screen.
  - b. Open a CMD console (Click Task Manager-->File --> Run new task and enter CMD).
  - c. Enter the following command.

```
echo %PROCESSOR_ARCHITECTURE%
```

```
On an x64 (64-bit) machine, the output will be "AMD64".
```

2. Go to the WinOF-2 web page at: <https://www.nvidia.com/en-us/networking/> > Products > Software > InfiniBand Drivers (Learn More) > Nvidia WinOF-2.
3. Download the .exe image according to the architecture of your machine (see [Step 1](#)). The name of the .exe is in the following format: MLNX\_WinOF2-<version>\_<arch>.exe.

Installing the incorrect .exe file is prohibited. If you do so, an error message will be displayed. For example, if you install a 64-bit .exe on a 32-bit machine, the wizard will display the following (or a similar) error message: "The installation package is not supported by this processor type. Contact your vendor"

### 4.1.3 Installing WinOF-2 Driver

The snapshots in the following sections are for illustration purposes only. The installation interface may slightly vary, depending on the used operating system. This section provides instructions for two types of installation procedures, and both require administrator privileges:

- [Attended Installation](#) An installation procedure that requires frequent user intervention.
- [Unattended Installation](#) An automated installation procedure that requires no user intervention.

#### 4.1.3.1 Attended Installation

The following is an example of an installation session.

1. Double click the .exe and follow the GUI instructions to install MLNX\_WinOF2.
- 2.

[Optional] Manually configure your setup to contain the logs option (replace "LogFile" with the relevant directory).

<code>&lt;ac:structured-macro ac:name="unmigrated-wiki-markup" ac:schema-version="1" ac:macro-id="07376fd4-ed75-4a73-a322-8da5f3648579"&gt;&lt;ac:plain-text-body&gt;&lt;![CDATA[</code>	<code>MLNX_WinOF2_&lt;revision_version&gt;_All_Arch.exe /v"/l*vx [LogFile]"</code>	<code>]]&gt;&lt;/ac:plain-text-body&gt;&lt;/ac:structured-macro&gt;</code>
--	--	--

3.

[Optional] If you do not want to upgrade your firmware version (i.e., MT\_SKIPFWUPGRD default value is False).

<code>MLNX_WinOF2_&lt;revision_version&gt;_All_Arch.exe /v" MT_SKIPFWUPGRD=1"</code>
--

4.

[Optional] If you do not want to install the Rshim driver, run.

```
MLNX_WinOF2_<revision_version>_All_Arch.exe /v" MT_DISABLE_RSHIM_INSTALL=1"
```


The Rshim driver installation will fail if a prior Rshim driver is already installed. The following fail message will be displayed in the log:  
"ERROR!!! Installation failed due to following errors: MlxRshim drivers installation disabled and MlxRshim drivers Installed, Please remove the following oem inf files from driver store: <oem inf list>"

5.

[Optional] If you want to skip the check for unsupported devices, run.

```
MLNX_WinOF2_<revision_version>_All_Arch.exe /v" SKIPUNSUPPORTEDDEVCHECK=1"
```


6. Click Next in the Welcome screen.

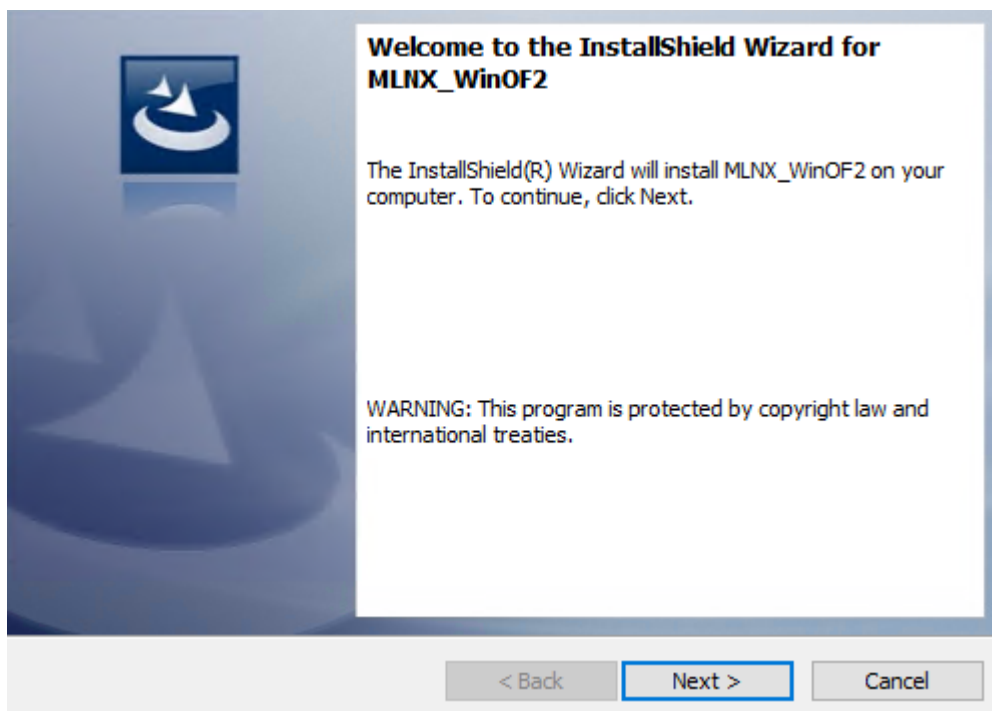

1. Read and accept the license agreement and click Next.

## License Agreement

Please read the following license agreement carefully.

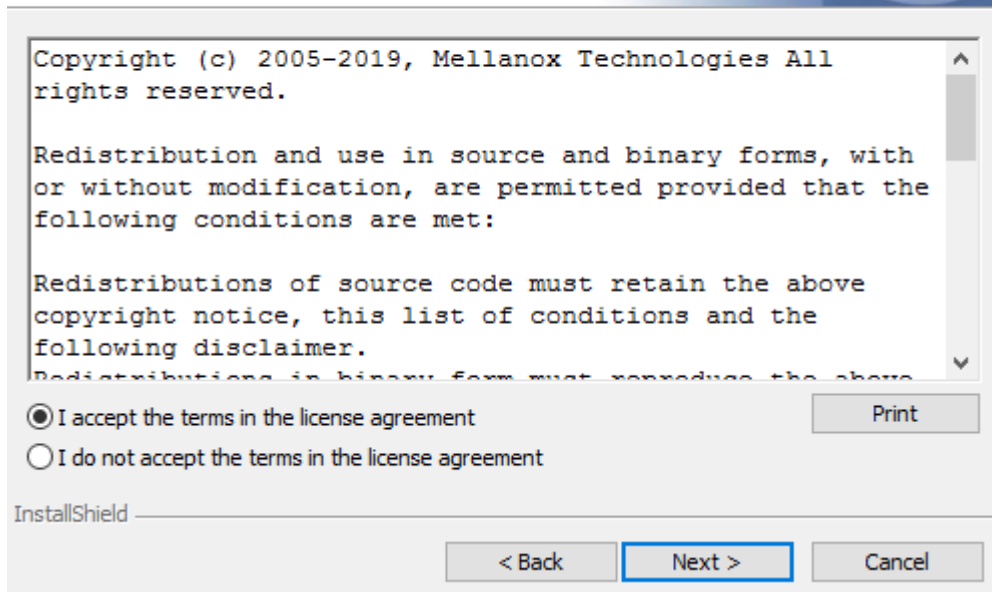

Copyright (c) 2005-2019, Mellanox Technologies All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

Redistributions in binary form must reproduce the above

I accept the terms in the license agreement  I do not accept the terms in the license agreement

Print


InstallShield

< Back Next > Cancel

1. Select the target folder for the installation.

## Destination Folder

Click Next to install to this folder, or click Change to install to a different folder.

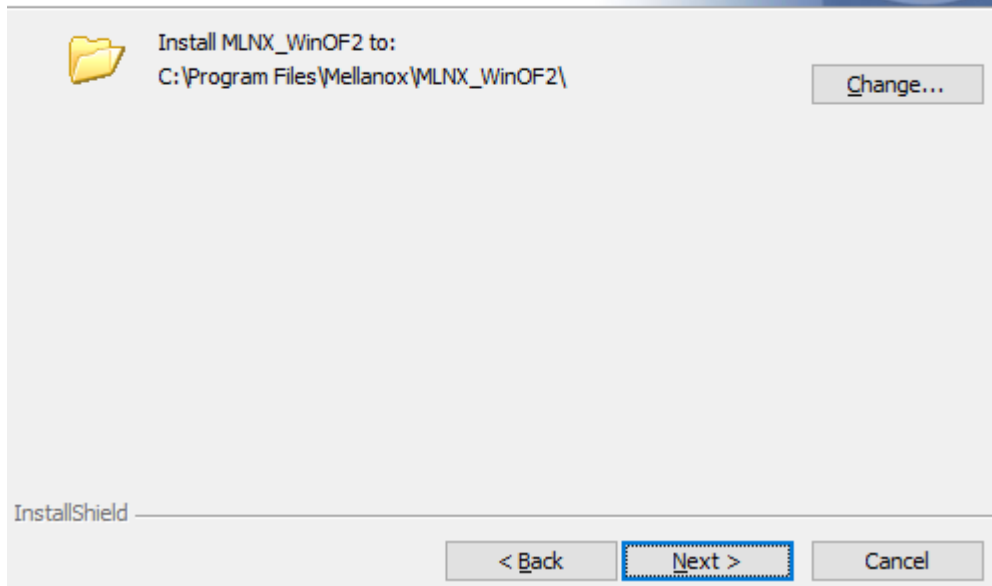

Install MLNX\_WinOF2 to:  
C:\Program Files\Mellanox\MLNX\_WinOF2\


Change...

InstallShield

< Back Next > Cancel

1. The firmware upgrade screen will be displayed in the following cases:
  - If the user has an OEM card. In this case, the firmware will not be displayed.

- If the user has a standard NVIDIA® card with an older firmware version, the firmware will be updated accordingly. However, if the user has both an OEM card and a NVIDIA® card, only the NVIDIA® card will be updated.

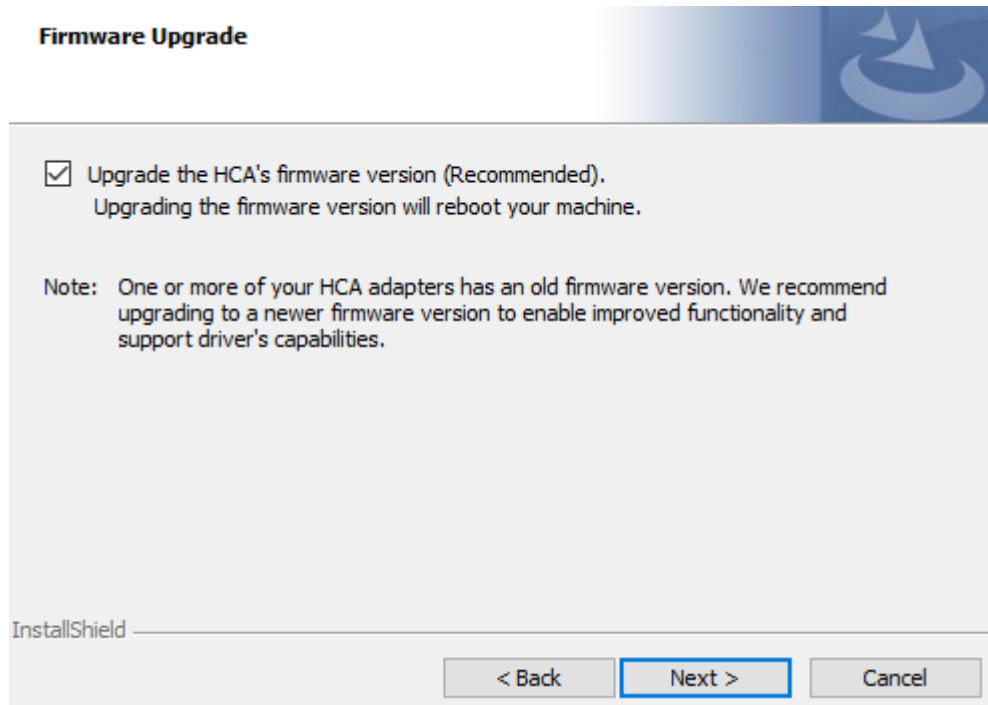



1. Select a Complete or Custom installation, follow [Step a](#) onward.

## Setup Type

Choose the setup type that best suits your needs.

Please select a setup type.


**Complete**  
 All program features will be installed. (Requires the most disk space.)

**Custom**  
 Choose which program features you want installed and where they will be installed. Recommended for advanced users.


InstallShield


< Back   Next >   Cancel


1. a. Select the desired feature to install:
  - Performances tools - install the performance tools that are used to measure performance in user environment
  - Documentation - contains the User Manual and Release Notes
  - Management tools - installation tools used for management, such as mlxstat
  - Diagnostic Tools - installation tools used for diagnostics, such as mlx5cmd
- b. Click Next to install the desired tools.

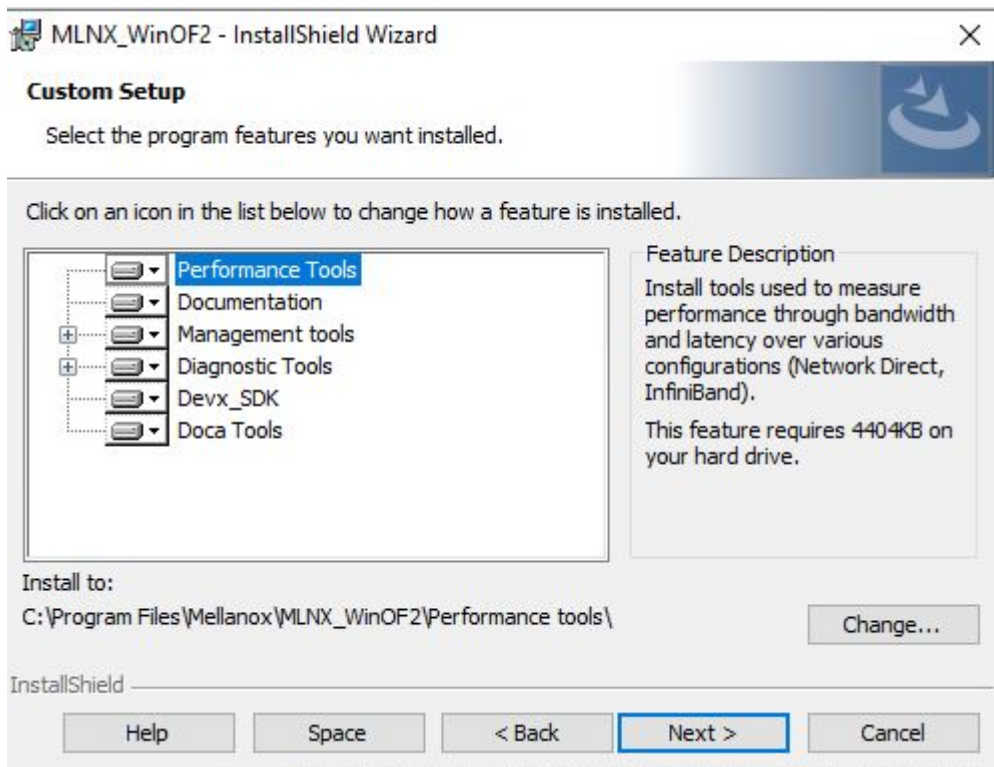


1. Click Install to start the installation.

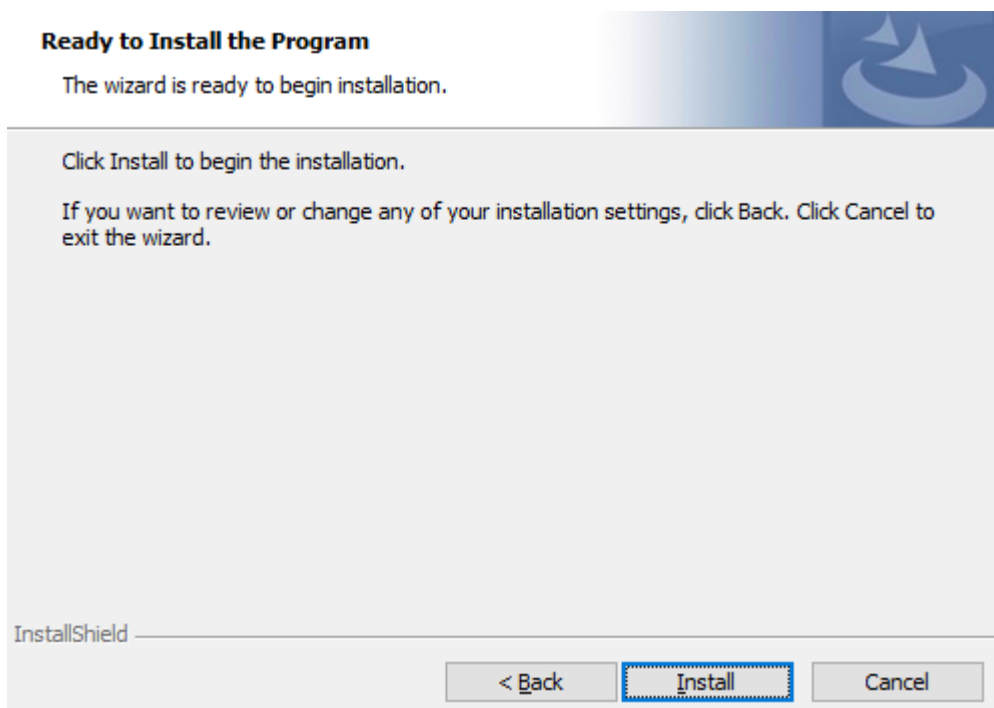

1. In case firmware upgrade option was checked in [Step 7](#), you will be notified if a firmware upgrade is required (see  ).

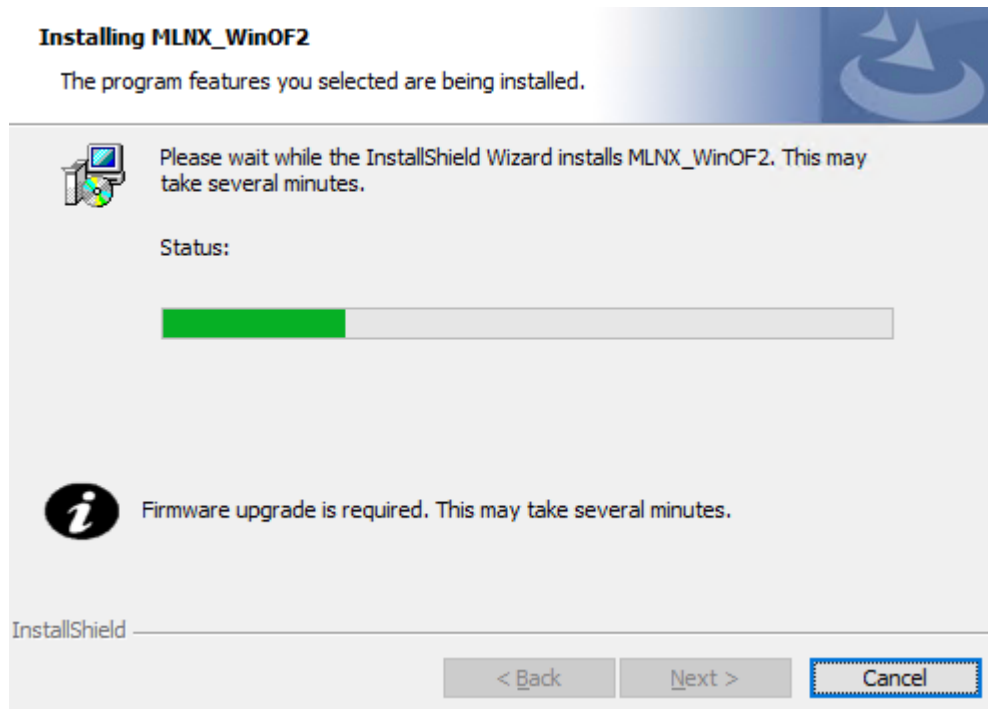

1. Click Finish to complete the installation.

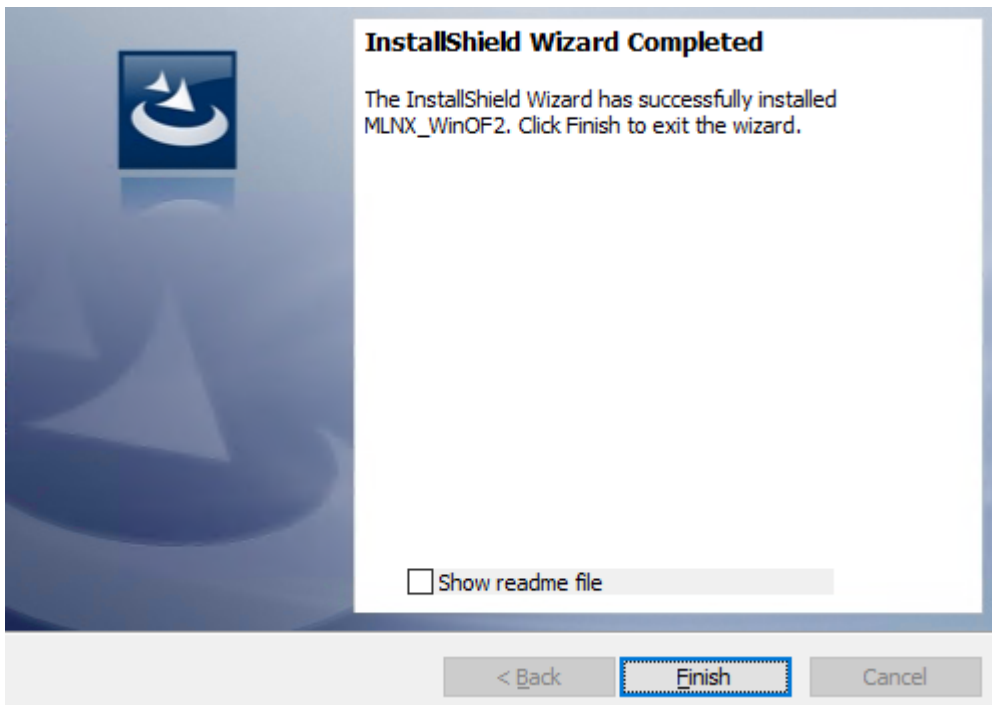

### 4.1.3.2 Unattended Installation

If no reboot options are specified, the installer restarts the computer whenever necessary without displaying any prompt or warning to the user. To control the reboots, use the */norestart* or */forcerestart* standard command-line options.

The following is an example of an unattended installation session.

1. Open a CMD console→Click Start> Task Manager File→Run new task> and enter CMD.
2. Install the driver. Run:

<pre>&lt;ac:structured-macro ac:name="unmigrated-wiki- markup" ac:schema-version="1" ac:macro-id="6af53c36- e151-4579-8a07-7ff28695460e"&gt;&lt;ac:plain-text-body&gt;&lt;! [CDATA[</pre>	<pre>MLNX_WinOF2-[Driver/ Version]&lt;revision_versio n&gt;_All-Arch.exe /S /v/ qn</pre>	<pre>]]&gt;&lt;/ac:plain- text-body&gt;&lt;/ ac:structured- macro&gt;</pre>
---	--	---

- 3.

[Optional] Manually configure your setup to contain the logs option:

<code>&lt;ac:structured-macro ac:name="unmigrated-wiki-markup" ac:schema-version="1" ac:macro-id="860f822f-dc09-420e-82b9-6790e4319ebe"&gt;&lt;ac:plain-text-body&gt;&lt;![CDATA[</code>	<code>MLNX_WinOF2-[Driver/Version]&lt;revision_version&gt;_All-Arch.exe /S /v/qn /v"/l*vx [LogFile]"</code>	<code>]]&gt;&lt;/ac:plain-text-body&gt;&lt;/ac:structured-macro&gt;</code>
--	---	--

4.

[Optional] if you wish to control whether to install ND provider or not (i.e., *MT\_NDPROPERTY default value is True*).

<pre>&lt;ac:structured-macro ac:name="unmigrated-wiki-markup" ac:schema-version="1" ac:macro-id="29d8c4b7-96b4-4b36-afc6-3ee806a500f3"&gt;&lt;ac:plain-text-body&gt;&lt;![CDATA[</pre>	<pre>MLNX_WinOF2-[Driver/Version]_&lt;revision_version&gt;_All_Arch.exe /vMT_NDPROPERTY=1</pre>	<pre>]]&gt;&lt;/ac:plain-text-body&gt;&lt;/ac:structured-macro&gt;</pre>
--	---	--

5.

[Optional] If you do not wish to upgrade your firmware version (i.e., *MT\_SKIPFWUPGRD* default value is *False*).

<pre>&lt;ac:structured-macro ac:name="unmigrated-wiki-markup" ac:schema-version="1" ac:macro-id="48d8edf3-ee31-46cb-b3e9-a87cea5ec3bf"&gt;&lt;ac:plain-text-body&gt;&lt;![CDATA[</pre>	<pre>MLNX_WinOF2-[Driver/Version]_&lt;revision_version&gt;_All_Arch.exe /vMT_SKIPFWUPGRD=1</pre>	<pre>]]&gt;&lt;/ac:plain-text-body&gt;&lt;/ac:structured-macro&gt;</pre>
--	--	--

6.

[Optional] If you do not want to install the Rshim driver, run.

```
MLNX_WinOF2_<revision_version>_All_Arch.exe /v" MT_DISABLE_RSHIM_INSTALL=1"
```

The Rshim driver installation will fail if a prior Rshim driver is already installed. The following fail message will be displayed in the log:  
"ERROR!!! Installation failed due to following errors: MlxRshim drivers installation disabled and MlxRshim drivers Installed, Please remove the following oem inf files from driver store: <oem inf list>"

7.

[Optional] If you want to enable the default configuration for Rivermax, run.

```
MLNX_WinOF2_<revision_version>_All_Arch.exe /v"MT_RIVERMAX=1 /l*v C:\Users\<user>\log.txt "
```

8.

[Optional] If you want to skip the check for unsupported devices, run/

```
MLNX_WinOF2_<revision_version>_All_Arch.exe /v" SKIPUNSUPPORTEDDEVCHECK=1"
```

## 4.1.4 Firmware Upgrade

### [MFT User Manual](#)

If the machine has a standard NVIDIA® card with an older firmware version, the firmware will be automatically updated as part of the NVIDIA® WinOF-2 package installation. For information on how to upgrade firmware manually, please refer to . If the machine has a DDA (pass through) facility, firmware update is supported only in the Host. Therefore, to update the firmware, the following must be performed:

9. Return the network adapters to the Host.
10. Update the firmware according to the steps in the [MFT User Manual](#).
11. Attach the adapters back to VM with the DDA tools.

## 4.2 Linux Driver Installation

This section describes how to install and test the MLNX\_OFED for Linux package on a single server with a ConnectX-5 adapter card installed.

### 4.2.1 Prerequisites

Requirements	Description
Platforms	A server platform with a ConnectX-5 InfiniBand/VPI adapter card installed <ul style="list-style-type: none"><li>• MT4119 ConnectX®-5 (VPI, IB, EN) (firmware: fw-ConnectX5)</li></ul>
Required Disk Space for Installation	1GB
Operating System	Linux operating system. For the list of supported operating system distributions and kernels, please refer to the <i>NVIDIA OFED Release Notes</i> file.
Installer Privileges	The installation requires administrator (root) privileges on the target machine.

### 4.2.2 Downloading NVIDIA OFED

1. Verify that the system has a NVIDIA network adapter installed. The following example shows a system with an installed NVIDIA adapter card:

a. lsp ci -v	<pre>grep Mellanox &lt;ac:structured-macro ac:name="unmigrated-wiki-markup" ac:schema-version="1" ac:macro-id="861961f7-f971-405d-9aad-7b2bca5f8d94"&gt;&lt;ac:plain-text-body&gt;&lt;! [CDATA[86:00.0 Network controller [0207]: Mellanox Technologies MT27620 Family ]]&gt;&lt;/ac:plain-text-body&gt;&lt;/ac:structured-macro&gt; Subsystem: Mellanox Technologies Device 0014 &lt;ac:structured-macro ac:name="unmigrated-wiki-markup" ac:schema-version="1" ac:macro-id="2a5e2e63-e7c2-46f8-8ceb-04c97da2afde"&gt;&lt;ac:plain-text-body&gt;&lt;! [CDATA[86:00.1 Network controller [0207]: Mellanox Technologies MT27620 Family ]]&gt;&lt;/ac:plain-text-body&gt;&lt;/ac:structured-macro&gt; Subsystem: Mellanox Technologies Device 0014</pre>
--------------------	--

2. Download the ISO image to your host. The image's name has the format MLNX\_OFED\_LINUX-<ver>-<OS label><CPU arch>.iso. You can download and install the latest OpenFabrics Enterprise Distribution (OFED) software package available via the NVIDIA web site at [nvidia.com/en-us/networking](https://www.nvidia.com/en-us/networking) → Products → Software → InfiniBand Drivers → [NVIDIA MLNX\\_OFED](#)

- a.
  - i. Scroll down to the Download wizard, and click the Download tab.
  - ii. Choose your relevant package depending on your host operating system.
  - iii. Click the desired ISO/tgz package.
  - iv. To obtain the download link, accept the End User License Agreement (EULA).

3. Use the Hash utility to confirm the file integrity of your ISO image. Run the following command and compare the result to the value provided on the download page.

```
SHA256 MLNX_OFED_LINUX-<ver>-<OS label>.iso
```

### Installing MLNX\_OFED

#### Installation Script

The installation script, mlnxofedinstall, performs the following:

- Discovers the currently installed kernel
- Uninstalls any software stacks that are part of the standard operating system distribution or another vendor's commercial stack
- Installs the MLNX\_OFED\_LINUX binary RPMs (if they are available for the current kernel)
- Identifies the currently installed InfiniBand and Ethernet network adapters and automatically upgrades the firmware Note: To perform a firmware upgrade using customized firmware binaries, a path can be provided to the folder that contains the firmware binary files, by running --fw-image-dir. Using this option, the firmware version embedded in the MLNX\_OFED package will be ignored. Example:

```
./mlnxofedinstall --fw-image-dir /tmp/my_fw_bin_files
```

**If the driver detects unsupported cards on the system, it will abort the installation procedure. To avoid this, make sure to add --skip-unsupported-devices-check flag during installation.**

#### Usage

<pre>&lt;ac:structured-macro ac:name="unmigrated-wiki-markup" ac:schema-version="1" ac:macro-id="4c7c5664-a8db-4b07-a8c1-dc7c3fa06b60"&gt;&lt;ac:plain-text-body&gt;&lt;![CDATA[</pre>	<pre>./mnt/mlnxofedinst all [OPTIONS]</pre>	<pre>]]&gt;&lt;/ac:plain-text-body&gt;&lt;/ac:structured-macro&gt;</pre>
--	---	--

The installation script removes all previously installed OFED packages and re-installs from scratch. You will be prompted to acknowledge the deletion of the old packages.

```
Pre-existing configuration files will be saved with the extension ".conf.rpmsave".
```

- If you need to install OFED on an entire (homogeneous) cluster, a common strategy is to mount the ISO image on one of the cluster nodes and then copy it to a shared file system such as NFS. To install on all the cluster nodes, use cluster-aware tools (such as pdsh).
- If your kernel version does not match with any of the offered pre-built RPMs, you can add your kernel version by using the "mlnx\_add\_kernel\_support.sh" script located inside the MLNX\_OFED package.

On Redhat and SLES distributions with errata kernel installed there is no need to use the mlnx\_add\_kernel\_support.sh script. The regular installation can be performed and weak-updates mechanism will create symbolic links to the MLNX\_OFED kernel modules.

If you regenerate kernel modules for a custom kernel (using --add-kernel-support), the packages installation will not involve automatic regeneration of the initramfs. In some cases, such as a system with a root filesystem mounted over a ConnectX card, not regenerating the initramfs may even cause the system to fail to reboot.

In such cases, the installer will recommend running the following command to update the initramfs:

```
dracut -f
```


On some OSs, dracut -f might result in the following error message which can be safely ignore.

```
libkmod: kmod_module_new_from_path: kmod_module 'mdev' already exists with different path|
```

The "mlnx\_add\_kernel\_support.sh" script can be executed directly from the mlnxofedinstall script. For further information, please see '--add-kernel-support' option below.

On Ubuntu and Debian distributions drivers installation use Dynamic Kernel Module Support (DKMS) framework. Thus, the drivers' compilation will take place on the host during MLNX\_OFED installation. Therefore, using "mlnx\_add\_kernel\_support.sh" is irrelevant on Ubuntu and Debian distributions.

Example: The following command will create a MLNX\_OFED\_LINUX ISO image for RedHat 7.3 under the /tmp directory.

```
i. ./MLNX_OFED_LINUX-x.x-x-rhel7.3-x86_64/mlnx_add_kernel_support.sh -m /tmp/MLNX_OFED_LINUX-x.x-x-rhel7.3-x86_64/ --make-tgz
Note: This program will create MLNX_OFED_LINUX TGZ for rhel7.3 under /tmp directory.
All Mellanox, OEM, OFED, or Distribution IB packages will be removed.
<ac:structured-macro ac:name="unmigrated-wiki-markup" ac:schema-version="1" ac:macro-id="9cf57b01-76dd-4261-851a-743e7733751f"><ac:plain-text-body><![CDATA[ Broken link </ac:plain-text-body></ac:structured-macro>
See log file /tmp/mlnx_ofed_iso.21642.log

Building OFED RPMs. Please wait...
Removing OFED RPMs...
Created /tmp/MLNX_OFED_LINUX-x.x-x-rhel7.3-x86_64-ext.tgz
```

- The script adds the following lines to /etc/security/limits.conf for the userspace components such as MPI:
  - \* soft memlock unlimited
  - \* hard memlock unlimited
  - These settings set the amount of memory that can be pinned by a userspace application to unlimited. If desired, tune the value unlimited to a specific amount of RAM.

For your machine to be part of the InfiniBand/VPI fabric, a Subnet Manager must be running on one of the fabric nodes. At this point, OFED for Linux has already installed the OpenSM Subnet Manager on your machine.

For the list of installation options, run:

```
./mlnxofedinstall --h
```

### Installation Procedure

This section describes the installation procedure of MLNX\_OFED on NVIDIA adapter cards.

1. a. Log in to the installation machine as root.  
b. Mount the ISO image on your machine.

```
host1# mount -o ro,loop MLNX_OFED_LINUX<ver><OS label><CPU arch>.iso /mnt
```

- c. Run the installation script.

```
/mnt/mlnxofedinstall
Logs dir: /tmp/MLNX_OFED_LINUX-x.x-x.logs
This program will install the MLNX_OFED_LINUX package on your machine.
Note that all other Mellanox, OEM, OFED, RDMA or Distribution IB packages will be removed.
Those packages are removed due to conflicts with MLNX_OFED_LINUX, do not reinstall them.
Starting MLNX_OFED_LINUX-x.x.x installation ...
.....
.....
Installation finished successfully.
Attempting to perform Firmware update...
Querying Mellanox devices firmware ...
```

For unattended installation, use the --force installation option while running the MLNX\_OFED installation script: /mnt/mlnxofedinstall --force

MLNX\_OFED for Ubuntu should be installed with the following flags in chroot environment: ./mlnxofedinstall --without-dkms --add-kernel-support --kernel <kernel version in chroot> --without-fw-update --force For example: ./mlnxofedinstall --without-dkms --add-kernel-support --kernel 3.13.0-85-generic --without-fw-update --force Note that the path to kernel sources (-kernel-sources) should be added if the sources are not in their default location.

In case your machine has the latest firmware, no firmware update will occur and the installation script will print at the end of installation a message similar to the following:  
 Device #1: ----- Device Type: ConnectX-X Part Number: MCXXX-XXX PSID: MT\_<version>  
 PCI Device Name: 0b:00.0 Base MAC: 0000e41d2d5cf810 Versions: Current Available FW  
 XX.XX.XXXX Status: Up to date

In case your machine has an unsupported network adapter device, no firmware update will occur and one of the error messages below will be printed. Please contact your hardware vendor for help with firmware updates.  
 Error message #1: Device #1: ----- Device Type: ConnectX-X Part Number: MCXXX-XXX  
 PSID: MT\_<version> PCI Device Name: 0b:00.0 Base MAC: 0000e41d2d5cf810 Versions: Current  
 Available FW XX.XX.XXXX Status: No matching image found  
 Error message #2: The firmware for this device is not distributed inside NVIDIA driver:  
 0000:01:00.0 (PSID: IBM2150110033) To obtain firmware for this device, please contact your  
 HW vendor.

d. Case A: If the installation script has performed a firmware update on your network adapter, you need to either restart the driver or reboot your system before the firmware update can take effect. Refer to the table below to find the appropriate action for your specific card.

Action \ Adapter	Driver Restart	Standard Reboot (Soft Reset)	Cold Reboot (Hard Reset)
Standard ConnectX-4/ ConnectX-4 Lx or higher	-	+	-
Adapters with Multi-Host Support	-	-	+
Socket Direct Cards	-	-	+

Case B: If the installations script has not performed a firmware upgrade on your network adapter, restart the driver by running: "/etc/init.d/openibd restart".

- e. (InfiniBand only) Run the hca\_self\_test.ofed utility to verify whether or not the InfiniBand link is up. The utility also checks for and displays additional information such as:
- HCA firmware version
  - Kernel architecture
  - Driver version
  - Number of active HCA ports along with their states
  - Node GUID For more details on hca\_self\_test.ofed, see the file docs/readme\_and\_user\_manual/hca\_self\_test.readme.

After installation completion, information about the OFED installation, such as prefix, kernel version, and installation parameters can be retrieved by running the command /etc/infiniband/info. Most of the OFED components can be configured or reconfigured after the installation, by modifying the relevant configuration files. See the relevant chapters in this manual for details. The list of the modules that will be loaded automatically upon boot can be found in the /etc/infiniband/openib.conf file.

Installing OFED will replace the RDMA stack and remove existing 3rd party RDMA connectors.

## Installation Results

Software	<ul style="list-style-type: none"> <li>• Most of MLNX_OFED packages are installed under the "/usr" directory except for the following packages which are installed under the "/opt" directory:             <ul style="list-style-type: none"> <li>• fca and ibutils</li> <li>• iproute2 (rdma tool) - installed under /opt/Mellanox/iproute2/sbin/rdma</li> </ul> </li> <li>• The kernel modules are installed under             <ul style="list-style-type: none"> <li>• /lib/modules/`uname -r`/updates on SLES and Fedora Distributions</li> <li>• /lib/modules/`uname -r`/extra/mlnx-ofa_kernel on RHEL and other RedHat like Distributions</li> <li>• /lib/modules/`uname -r`/updates/dkms/ on Ubuntu</li> </ul> </li> </ul>
<ul style="list-style-type: none"> <li>• Firmware</li> </ul>	<ul style="list-style-type: none"> <li>• The firmware of existing network adapter devices will be updated if the following two conditions are fulfilled:             <ul style="list-style-type: none"> <li>• The installation script is run in default mode; that is, without the option '-without fw-update'</li> <li>• The firmware version of the adapter device is older than the firmware version included with the OFED ISO image <b>Note:</b> If an adapter's Flash was originally programmed with an Expansion ROM image, the automatic firmware update will also burn an Expansion ROM image.</li> </ul> </li> <li>• In case your machine has an unsupported network adapter device, no firmware update will occur and the error message below will be printed. "The firmware for this device is not distributed inside NVIDIA driver: 0000:01:00.0 (PSID: IBM2150110033) To obtain firmware for this device, please contact your HW vendor."</li> </ul>

## Installation Logging

While installing MLNX\_OFED, the install log for each selected package will be saved in a separate log file.

The path to the directory containing the log files will be displayed after running the installation script in the following format:

Example:

```
Logs dir: /tmp/MLNX_OFED_LINUX-4.4-1.0.0.0.IBMM2150110033.logs
```

## Driver Load Upon System Boot

Upon system boot, the NVIDIA drivers will be loaded automatically.



*To prevent the automatic load of the NVIDIA drivers upon system boot:*

1. a. Add the following lines to the "/etc/modprobe.d/mlnx.conf" file.

```
blacklist mlx5_core
blacklist mlx5_ib
```

- b. Set "ONBOOT=no" in the "/etc/infiniband/openib.conf" file.
- c. If the modules exist in the initramfs file, they can automatically be loaded by the kernel. To prevent this behavior, update the initramfs using the operating systems' standard tools. **Note:** The process of updating the initramfs will add the blacklists from step 1, and will prevent the kernel from loading the modules automatically.

## mlnxofedinstall Return Codes

The table below lists the mlnxofedinstall script return codes and their meanings.

Return Code	Meaning
0	The Installation ended successfully
1	The installation failed
2	No firmware was found for the adapter device
22	Invalid parameter
28	Not enough free space
171	Not applicable to this system configuration. This can occur when the required hardware is not present on the system
172	Prerequisites are not met. For example, missing the required software installed or the hardware is not configured correctly
173	Failed to start the mst driver

Software	<ul style="list-style-type: none"> <li>Most of MLNX_OFED packages are installed under the "/usr" directory except for the following packages which are installed under the "/opt" directory: <ul style="list-style-type: none"> <li>fca and ibutils</li> <li>iproute2 (rdma tool) - installed under /opt/Mellanox/iproute2/sbin/rdma</li> </ul> </li> <li>The kernel modules are installed under <ul style="list-style-type: none"> <li>/lib/modules/`uname -r`/updates on SLES and Fedora Distributions</li> <li>/lib/modules/`uname -r`/extra/mlnx-ofa_kernel on RHEL and other RedHat like Distributions</li> <li>/lib/modules/`uname -r`/updates/dkms/ on Ubuntu</li> </ul> </li> </ul>
<ul style="list-style-type: none"> <li>Firmware</li> </ul>	<ul style="list-style-type: none"> <li>The firmware of existing network adapter devices will be updated if the following two conditions are fulfilled: <ul style="list-style-type: none"> <li>The installation script is run in default mode; that is, without the option '-without fw-update'</li> <li>The firmware version of the adapter device is older than the firmware version included with the OFED ISO image <b>Note:</b> If an adapter's Flash was originally programmed with an Expansion ROM image, the automatic firmware update will also burn an Expansion ROM image.</li> </ul> </li> <li>In case your machine has an unsupported network adapter device, no firmware update will occur and the error message below will be printed. "The firmware for this device is not distributed inside NVIDIA driver: 0000:01:00.0 (PSID: IBM2150110033) To obtain firmware for this device, please contact your HW vendor."</li> </ul>

### Installation Logging

While installing MLNX\_OFED, the install log for each selected package will be saved in a separate log file.

The path to the directory containing the log files will be displayed after running the installation script in the following format:

Example:

```
Logs dir: /tmp/MLNX_OFED_LINUX-4.4-1.0.0.0.IBMM2150110033.logs
```

### Uninstalling MLNX\_OFED

Use the script /usr/sbin/ofed\_uninstall.sh to uninstall the MLNX\_OFED package. The script is part of the ofed-scripts RPM.

### Additional Installation Procedures

#### Installing MLNX\_OFED Using YUM

This type of installation is applicable to RedHat/OL and Fedora operating systems.

Setting up MLNX\_OFED YUM Repository

1. a. Log into the installation machine as root.
- b. Mount the ISO image on your machine and copy its content to a shared location in your network.

```
i. mount -o ro,loop MLNX_OFED_LINUX<ver><OS-label><CPU arch>.iso /mnt
```

- c. Download and install NVIDIA's GPG-KEY: The key can be downloaded via the following link: <http://www.mellanox.com/downloads/ofed/RPM-GPG-KEY-Mellanox>

<pre>i. wget http:// www.mellanox.co m/downloads/ ofed/RPM-GPG- KEY-Mellanox -20180125 13:52:30 http:// www.mellanox.co m/downloads/ ofed/RPM-GPG- KEY-Mellanox Resolving www.mellanox.co m... 72.3.194.0 Connecting to www.mellanox.co m</pre>	<pre>72 :80... connected. .3. HTTP request sent, awaiting response... 200 19 OK 4. &lt;ac:structured-macro ac:name="unmigrated- wiki-markup" ac:schema-version="1" ac:macro- id="f7b743fd-3b57-4f8c-9205-3c892e5d8e03"&gt;&lt; ac:plain-text-body&gt;&lt;![CDATA[Length: 1354 (1.3K) [text/plain] ]]&gt;&lt;/ac:plain-text-body&gt;&lt;/ac:structured- macro&gt; Saving to: ?RPM-GPG-KEY-Mellanox?  &lt;ac:structured-macro ac:name="unmigrated- wiki-markup" ac:schema-version="1" ac:macro- id="63ad8d24-5395-42ab- baaa-7b3687f0f4fb"&gt;&lt;ac:plain-text-body&gt;&lt;![ CDATA[100% [===== =====] 1,354 --.-K/s in 0s ]]&gt;&lt;/ac:plain-text-body&gt;&lt;/ac:structured- macro&gt;  &lt;ac:structured-macro ac:name="unmigrated- wiki-markup" ac:schema-version="1" ac:macro- id="2f6da16b-4e29-40cc- a93e-2d4de3a70c45"&gt;&lt;ac:plain-text-body&gt;&lt;![ CDATA[20180125 13:52:30 (247 MB/s) - ?RPM- GPG-KEY-Mellanox? saved [1354/1354]</pre>	<pre>]]&gt;&lt;/ ac:plain- text- body&gt;&lt;/ ac:structu red- macro&gt;</pre>
---	---	--

- d. Install the key.

<pre>i. sudo rpm --import RPM-GPG-KEY-Mellanox warning: rpmts_HdrFromFdno: Header V3 DSA/SHA1 Signature, key ID 6224c050: NOKEY Retrieving key from file:///repos/MLNX_OFED/&lt;MLNX_OFED file&gt;/RPM-GPG-KEY-Mellanox Importing GPG key 0x6224C050: Userid: "Mellanox Technologies (Mellanox Technologies - Signing Key v2) &lt;support@mellanox.com&gt;" From : /repos/MLNX_OFED/&lt;MLNX_OFED file&gt;/RPM-GPG-KEY- Mellanox &lt;ac:structured-macro ac:name="unmigrated-wiki-markup" ac:schema-version="1" ac:macro-id="52c6291a- b2af-4e08-8cbd-4d9c3c7eed02"&gt;&lt;ac:plain-text-body&gt;&lt;![ CDATA[Is this ok [y/N]:</pre>	<pre>]]&gt;&lt;/ac:plain- text-body&gt;&lt;/ ac:structured- macro&gt;</pre>
---	---

- e. Check that the key was successfully imported.

<pre>i. rpm -q gpg-pubkey --qf '%{NAME}%     %{VERSION}%{RELEASE}\t%{SUMMARY}     \n'</pre>	<pre>grep Mellanox gpg-pubkey-a9e4b643-520791ba gpg(Mellanox Technologies &lt;support@mellanox.com&gt;)</pre>
---	---

f. Create a yum repository configuration file called "/etc/yum.repos.d/mlnx\_ofed.repo" with the following content:

<pre>&lt;ac:structured-macro ac:name="unmigrated-wiki-markup" ac:schema-version="1" ac:macro- id="54e56272-6c43-475b-9ac6-1d2c8f7adcc7"&gt;&lt;ac:plain-text- body&gt;&lt;![CDATA[</pre>	<pre>[mlnx_ofed] ]]&gt;&lt;/ac:plain-text- body&gt;&lt;/ac:structured- macro&gt; name=MLNX_OFED Repository baseurl= file:///&lt;path to extracted MLNX_OFED package&gt;/RPMS  enabled=1 gpgkey= file:///&lt;path to the downloaded key RPM- GPG-KEY-Mellanox&gt;  gpgcheck=1</pre>
--	--

g. Check that the repository was successfully added.

<pre>i. yum repolist Loaded plugins: product-id, security, subscription-manager This system is not registered to Red Hat Subscription Management. You can use subscription-manager to register. repo id repo name status mlnx_ofed MLNX_OFED Repository 108 rpmforge RHEL 6Server - RPMforge.net - dag 4,597  repolist: 8,351</pre>
---

#### Setting up MLNX\_OFED YUM Repository Using --add-kernel-support


h. Log into the installation machine as root.

i. Mount the ISO image on your machine and copy its content to a shared location in your network.

<pre>i. mount -o ro,loop MLNX_OFED_LINUX&lt;ver&gt;&lt;OS label&gt;&lt;CPU arch&gt;.iso /mnt</pre>
--

j. Build the packages with kernel support and create the tarball.

```
i. /mnt/mlnx_add_kernel_support.sh --make-tgz <optional --kmp> -k $(uname -r)
-m /mnt/
Note: This program will create MLNX_OFED_LINUX TGZ for rhel7.6 under /tmp
directory.
<ac:structured-macro ac:name="unmigrated-wiki-markup" ac:schema-version="1"
ac:macro-id="7b56e272-623a-4693-976f-c55d0cf56b77"><ac:plain-text-body><!
```

 Broken link

```
[CDATA ></ac:plain-text-body></ac:structured-macro>
See log file /tmp/mlnx_iso.4120_logs/mlnx_ofed_iso.4120.log
```

```
Checking if all needed packages are installed...
Building MLNX_OFED_LINUX RPMs . Please wait...
Creating metadata-rpms for 3.10.0-957.21.3.el7.x86_64 ...
WARNING: If you are going to configure this package as a repository, then please
note
WARNING: that it contains unsigned rpms, therefore, you need to disable the
gpgcheck
WARNING: by setting 'gpgcheck=0' in the repository conf file.
Created /tmp/MLNX_OFED_LINUX-5.2-0.5.5.0-rhel7.6-x86_64-ext.tgz
```

k. Open the tarball.

```
i. cd /tmp/
```

2. tar xvf /tmp/MLNX\_OFED\_LINUX-5.2-0.5.5.0-rhel7.6-x86\_64-ext.tgz |

a. Create a YUM repository configuration file called "/etc/yum.repos.d/mlnx\_ofed.repo" with the following content:

<pre>&lt;ac:structured-macro ac:name="unmigrated-wiki-markup" ac:schema- version="1" ac:macro-id="f48a5645-0022-46ab-a28e- aac051bf0276"&gt;&lt;ac:plain-text-body&gt;&lt;![CDATA[</pre>	<pre>[mlnx_ofed] ]]&gt;&lt;/ac:plain-text- body&gt;&lt;/ac:structured- macro&gt; name=MLNX_OFED Repository baseurl= file:///&lt;path to extracted MLNX_OFED package&gt;/RPMS  enabled=1 gpgcheck=0</pre>
--	--

b. Check that the repository was successfully added.

```
i. yum repolist
Loaded plugins: product-id, security, subscription-manager
This system is not registered to Red Hat Subscription Management. You can use
subscription-manager to register.
repo id repo name status
mlnx_ofed MLNX_OFED Repository 108
rpmforge RHEL 6Server - RPMforge.net - dag 4,597

repolist: 8,351
```

## Installing MLNX\_OFED Using the YUM Tool

After setting up the YUM repository for MLNX\_OFED package, perform the following:

c. View the available package groups by invoking:

```
i. yum search mlnx-ofed-
mlnx-ofed-all.noarch : MLNX_OFED all installer package (with KMP support)
mlnx-ofed-all-user-only.noarch : MLNX_OFED all-user-only installer package (User Space packages only)
mlnx-ofed-basic.noarch : MLNX_OFED basic installer package (with KMP support)
mlnx-ofed-basic-user-only.noarch : MLNX_OFED basic-user-only installer package (User Space packages only)
mlnx-ofed-bluefield.noarch : MLNX_OFED bluefield installer package (with KMP support)
mlnx-ofed-bluefield-user-only.noarch : MLNX_OFED bluefield-user-only installer package (User Space packages only)
mlnx-ofed-dpdk.noarch : MLNX_OFED dpdk installer package (with KMP support)
mlnx-ofed-dpdk-upstream-libs.noarch : MLNX_OFED dpdk-upstream-libs installer package (with KMP support)
mlnx-ofed-dpdk-upstream-libs-user-only.noarch : MLNX_OFED dpdk-upstream-libs-user-only installer package (User Space packages only)
mlnx-ofed-dpdk-user-only.noarch : MLNX_OFED dpdk-user-only installer package (User Space packages only)
mlnx-ofed-eth-only-user-only.noarch : MLNX_OFED eth-only-user-only installer package (User Space packages only)
mlnx-ofed-guest.noarch : MLNX_OFED guest installer package (with KMP support)
mlnx-ofed-guest-user-only.noarch : MLNX_OFED guest-user-only installer package (User Space packages only)
mlnx-ofed-hpc.noarch : MLNX_OFED hpc installer package (with KMP support)
mlnx-ofed-hpc-user-only.noarch : MLNX_OFED hpc-user-only installer package (User Space packages only)
mlnx-ofed-hypervisor.noarch : MLNX_OFED hypervisor installer package (with KMP support)
mlnx-ofed-hypervisor-user-only.noarch : MLNX_OFED hypervisor-user-only installer package (User Space packages only)
mlnx-ofed-kernel-only.noarch : MLNX_OFED kernel-only installer package (with KMP support)
mlnx-ofed-vma.noarch : MLNX_OFED vma installer package (with KMP support)
mlnx-ofed-vma-eth.noarch : MLNX_OFED vma-eth installer package (with KMP support)
mlnx-ofed-vma-eth-user-only.noarch : MLNX_OFED vma-eth-user-only installer package (User Space packages only)
mlnx-ofed-vma-user-only.noarch : MLNX_OFED vma-user-only installer package (User Space packages only)
mlnx-ofed-vma-vpi.noarch : MLNX_OFED vma-vpi installer package (with KMP support)
mlnx-ofed-vma-vpi-user-only.noarch : MLNX_OFED vma-vpi-user-only installer package (User Space packages only)
```

where:

mlnx-ofed-all	Installs all available packages in MLNX_OFED
mlnx-ofed-basic	Installs basic packages required for running NVIDIA cards
mlnx-ofed-guest	Installs packages required by guest OS
mlnx-ofed-hpc	Installs packages required for HPC
mlnx-ofed-hypervisor	Installs packages required by hypervisor OS
mlnx-ofed-vma	Installs packages required by VMA

mlnx-ofed-vma-eth	Installs packages required by VMA to work over Ethernet
mlnx-ofed-vma-vpi	Installs packages required by VMA to support VPI
bluefield	Installs packages required for BlueField
dppk	Installs packages required for DPDK
dppk-upstream-libs	Installs packages required for DPDK using RDMA-Core
kernel-only	Installs packages required for a non-default kernel

Note: MLNX\_OFED provides kernel module RPM packages with KMP support for RHEL and SLES. For other operating systems, kernel module RPM packages are provided only for the operating system's default kernel. In this case, the group RPM packages have the supported kernel version in their package's name. Example:

```
mlnx-ofed-all-3.17.4301.fc21.x86_64.noarch : MLNX_OFED all installer package for kernel 3.17.4301.fc21.x86\_64 (without KMP support)
mlnx-ofed-basic-3.17.4301.fc21.x86_64.noarch : MLNX_OFED basic installer package for kernel 3.17.4301.fc21.x86\_64 (without KMP support)
mlnx-ofed-guest-3.17.4301.fc21.x86_64.noarch : MLNX_OFED guest installer package for kernel 3.17.4301.fc21.x86\_64 (without KMP support)
mlnx-ofed-hpc-3.17.4301.fc21.x86_64.noarch : MLNX_OFED hpc installer package for kernel 3.17.4301.fc21.x86\_64 (without KMP support)
mlnx-ofed-hypervisor-3.17.4301.fc21.x86_64.noarch : MLNX_OFED hypervisor installer package for kernel 3.17.4301.fc21.x86\_64 (without KMP support)
mlnx-ofed-vma-3.17.4301.fc21.x86_64.noarch : MLNX_OFED vma installer package for kernel 3.17.4301.fc21.x86\_64 (without KMP support)
mlnx-ofed-vma-eth-3.17.4301.fc21.x86_64.noarch : MLNX_OFED vma-eth installer package for kernel 3.17.4301.fc21.x86\_64 (without KMP support)
mlnx-ofed-vma-vpi-3.17.4301.fc21.x86_64.noarch : MLNX_OFED vma-vpi installer package for kernel 3.17.4301.fc21.x86\_64 (without KMP support)
mlnx-ofed-hypervisor-3.17.4301.fc21.x86_64.noarch : MLNX_OFED hypervisor installer package for kernel 3.17.4301.fc21.x86\_64 (without KMP support)
mlnx-ofed-vma-3.17.4301.fc21.x86_64.noarch : MLNX_OFED vma installer package for kernel 3.17.4301.fc21.x86\_64 (without KMP support)
mlnx-ofed-vma-eth-3.17.4301.fc21.x86_64.noarch : MLNX_OFED vma-eth installer package for kernel 3.17.4301.fc21.x86\_64 (without KMP support)
mlnx-ofed-vma-vpi-3.17.4301.fc21.x86_64.noarch : MLNX_OFED vma-vpi installer package for kernel 3.17.4301.fc21.x86\_64 (without KMP support)
```

When using an operating system different than RHEL or SLES, or you have installed a kernel that is not supported by default in MLNX\_OFED, you can use the `mlnx_add_kernel_support.sh` script to build MLNX\_OFED for your kernel. The script will automatically build the matching group RPM packages for your kernel so that you can still install MLNX\_OFED via yum. Please note that the resulting MLNX\_OFED repository will contain unsigned RPMs, therefore, you should set `'gpgcheck=0'` in the repository configuration file.

d. Install the desired group.

```

i. yum install mlnx-ofed-all
Loaded plugins: langpacks, product-id, subscription-manager
Resolving Dependencies
--> Running transaction check
--> Package mlnx-ofed-all.noarch 0:3.10.1.2 will be installed
-> Processing Dependency: kmod-iser = 1.0-OFED.3.1.0.1.2.1.g832a737.rhel7u1 for
package: mlnx-ofed-all3.1-0.1.2.noarch
.....
.....
qperf.x86_64 0:0.4.9-9
rds-devel.x86_64 0:2.0.7-1.12
rds-tools.x86_64 0:2.0.7-1.12
sdpnetstat.x86_64 0:1.60-26
srptools.x86_64 0:1.0.2-12

Complete!

```

Installing MLNX\_OFED using the "YUM" tool does not automatically update the firmware. To update the firmware to the version included in MLNX\_OFED package, run: # yum install mlnx-fw-updater

#### Installing MLNX\_OFED Using apt-get

This type of installation is applicable to Debian and Ubuntu operating systems.

Setting up MLNX\_OFED apt-get Repository

- e. Log into the installation machine as root.
- f. Extract the MLNX\_OFED package on a shared location in your network. It can be downloaded from <https://www.nvidia.com/en-us/networking/> → Products → Software → InfiniBand Drivers.
- g. Create an apt-get repository configuration file called "/etc/apt/sources.list.d/mlnx\_ofed.list" with the following content:

```

deb
file:/
<path to extracted MLNX_OFED package>/DEBS ./

```

- h. Download and install NVIDIA's Technologies GPG-KEY.

```

i. wget -qO - http://www.mellanox.com/downloads/ofed/RPM-GPG-KEY-Mellanox |
sudo apt-key add -

```

- i. Verify that the key was successfully imported.

```

i. apt-key list
pub 1024D/A9E4B643 20130811
uid Mellanox Technologies <support@mellanox.com>
sub 1024g/09FCC269 20130811

```

- j. Update the apt-get cache.

```
i. sudo apt-get update
```

 
Setting up MLNX\_OFED apt-get Repository Using --add-keyring

k. Log into the installation machine as root.

l. Mount the ISO image on your machine and copy its content to a shared location in your network.

```
i. mount -o ro,loop MLNX_OFED_LINUX<ver><OS-label><CPU arch>.iso /mnt
```

m. Build the packages with kernel support and create the tarball.

```
i. /mnt/mlnx_add_kernel_support.sh --make-tgz <optional --kmp> -k $(uname -r)
-m /mnt/
Note: This program will create MLNX_OFED_LINUX TGZ for rhel7.6 under /tmp
directory.
<ac:structured-macro ac:name="unmigrated-wiki-markup" ac:schema-version="1"
ac:macro-id="11baa339-184a-4952-86d0-504f4affc01e"><ac:plain-text-body><!
[CDATA[  ></ac:plain-text-body></ac:structured-macro>
See log file /tmp/mlnx_iso.4120_logs/mlnx_ofed_iso.4120.log

Checking if all needed packages are installed...
Building MLNX_OFED_LINUX RPMS . Please wait...
Creating metadata-rpms for 3.10.0-957.21.3.el7.x86_64 ...
WARNING: If you are going to configure this package as a repository, then please
note
WARNING: that it contains unsigned rpms, therefore, you need to disable the
gpgcheck
WARNING: by setting 'gpgcheck=0' in the repository conf file.
Created /tmp/MLNX_OFED_LINUX-5.2-0.5.5.0-rhel7.6-x86_64-ext.tgz
```

n. Open the tarball.

```
i. cd /tmp/
```

3. tar xvf /tmp/MLNX\_OFED\_LINUX5.2-0.5.5.0-rhel7.6-x86\_64-ext.tgz |

a. Create an apt-get repository configuration file called "/etc/apt/sources.list.d/mlnx\_ofed.list" with the following content:

<ac:structured-macro ac:name="unmigrated-wiki-markup" ac:schema-version="1" ac:macro-id="f01d78b9-a03b-4afb-9f97-17756fa132aa"><ac:plain-text-body><![CDATA[	deb [trusted=yes] file: /<path to extracted MLNX_OFED package>/DEBS ./	]]></ac:plain-text-body></ac:structured-macro>
--	--	--

b. Update the apt-get cache.

```
i. sudo apt-get update
```

Installing MLNX\_OFED Using the apt-get Tool

After setting up the apt-get repository for MLNX\_OFED package, perform the following:

c. View the available package groups by invoking:

- i. apt-cache search mlnx-ofed-  
apt-cache search mlnx-ofed .....
- knem-dkms - DKMS support **for** mlnx-ofed kernel modules
- mlnx-ofed-kernel-dkms - DKMS support **for** mlnx-ofed kernel modules
- mlnx-ofed-kernel-utils - Userspace tools to restart and tune mlnx-ofed kernel modules
- mlnx-ofed-vma-vpi - MLNX\_OFED vma-vpi installer **package** (with DKMS support)
- mlnx-ofed-kernel-only - MLNX\_OFED kernel-only installer **package** (with DKMS support)
- mlnx-ofed-bluefield - MLNX\_OFED bluefield installer **package** (with DKMS support)
- mlnx-ofed-hpc-user-only - MLNX\_OFED hpc-user-only installer **package** (User Space packages only)
- mlnx-ofed-dpdk-user-only - MLNX\_OFED dpdk-user-only installer **package** (User Space packages only)
- mlnx-ofed-all-exact - MLNX\_OFED all installer **package** (with DKMS support) (exact)
- mlnx-ofed-all - MLNX\_OFED all installer **package** (with DKMS support)
- mlnx-ofed-vma-vpi-user-only - MLNX\_OFED vma-vpi-user-only installer **package** (User Space packages only)
- mlnx-ofed-eth-only-user-only - MLNX\_OFED eth-only-user-only installer **package** (User Space packages only)
- mlnx-ofed-vma-user-only - MLNX\_OFED vma-user-only installer **package** (User Space packages only)
- mlnx-ofed-hpc - MLNX\_OFED hpc installer **package** (with DKMS support)
- mlnx-ofed-bluefield-user-only - MLNX\_OFED bluefield-user-only installer **package** (User Space packages only)
- mlnx-ofed-dpdk - MLNX\_OFED dpdk installer **package** (with DKMS support)
- mlnx-ofed-vma-eth-user-only - MLNX\_OFED vma-eth-user-only installer **package** (User Space packages only)
- mlnx-ofed-all-user-only - MLNX\_OFED all-user-only installer **package** (User Space packages only)
- mlnx-ofed-vma-eth - MLNX\_OFED vma-eth installer **package** (with DKMS support)
- mlnx-ofed-vma - MLNX\_OFED vma installer **package** (with DKMS support)
- mlnx-ofed-dpdk-upstream-libs-user-only - MLNX\_OFED dpdk-upstream-libs-user-only installer **package** (User Space packages only)
- mlnx-ofed-basic-user-only - MLNX\_OFED basic-user-only installer **package** (User Space packages only)
- mlnx-ofed-basic-exact - MLNX\_OFED basic installer **package** (with DKMS support) (exact)
- mlnx-ofed-basic - MLNX\_OFED basic installer **package** (with DKMS support)
- mlnx-ofed-dpdk-upstream-libs - MLNX\_OFED dpdk-upstream-libs installer **package** (with DKMS support)

where:

mlnx-ofed-all	MLNX_OFED all installer package
mlnx-ofed-basic	MLNX_OFED basic installer package
mlnx-ofed-vma	MLNX_OFED vma installer package
mlnx-ofed-hpc	MLNX_OFED HPC installer package
mlnx-ofed-vma-eth	MLNX_OFED vma-eth installer package
mlnx-ofed-vma-vpi	MLNX_OFED vma-vpi installer package
knem-dkms	MLNX_OFED DKMS support for mlnx-ofed kernel modules
kernel-dkms	MLNX_OFED kernel-dkms installer package
kernel-only	MLNX_OFED kernel-only installer package
bluefield	MLNX_OFED bluefield installer package

mlnx-ofed-all-exact	MLNX_OFED mlnx-ofed-all-exact installer package
dpdk	MLNX_OFED dpdk installer package
mlnx-ofed-basic-exact	MLNX_OFED mlnx-ofed-basic-exact installer package
dpdk-upstream-libs	MLNX_OFED dpdk-upstream-libs installer package

d. Install the desired group.

```
apt-get install '<group name>'
```

Example:

```
apt-get install mlnx-ofed-all
```

Installing MLNX\_OFED using the "apt-get" tool does not automatically update the firmware. To update the firmware to the version included in MLNX\_OFED package, run: # apt-get install mlnx-fw-updater

#### Performance Tuning

Depending on the application of the user's system, it may be necessary to modify the default configuration of network adapters based on the ConnectX® adapters. In case that tuning is required, please refer to the [Performance Tuning Guide for NVIDIA Network Adapters](#).

## 4.3 VMware Driver Installation

### 4.3.1 Hardware and Software Requirements

Requirement	Description
Platforms	A server platform with an adapter card based on ConnectX®-5 (VPI, IB, EN) (firmware: fw-ConnectX5)
Operating System	ESXi 6.5
Installer Privileges	The installation requires administrator privileges on the target machine.

### 4.3.2 Installing NATIVE ESXi Driver for VMware vSphere

Please uninstall all previous driver packages prior to installing the new version.

This section describes VMware Driver Installation. To install the driver:

4. Log into the ESXi server with root permissions.

5. Install the driver.

```
#> esxcli software vib install -d <path>/<bundle_file>
```

Example:

```
#> esxcli software vib install -d /tmp/MLNX-NATIVE-ESX-ConnectX45_4.16.8.8-10EM650.0.0.4240417.zip esxcli
```

6. Reboot the machine.
7. Verify the driver was installed successfully.

<pre>esxcli software vib list</pre>	<pre>grep nmlx nmlx5-core 4.16.8.8-10EM650.0.0.4240417 MEL PartnerSupported 201701-31 nmlx5-rdma 4.16.8.8-10EM650.0.0.4240417 MEL PartnerSupported 201701-31</pre>
-------------------------------------	--

After the installation process, all kernel modules are loaded automatically upon boot.

### 4.3.3 Removing Earlier NVIDIA Drivers

Please unload the previously installed drivers before removing them.

To remove all the drivers:

8. Log into the ESXi server with root permissions.
9. List all the existing NATIVE ESXi driver modules. (See Step 4 in [Installing NATIVE ESXi Driver for VMware vSphere.](#))
10. Remove each module:

```
#> esxcli software vib remove -n nmlx5-rdma  
#> esxcli software vib remove -n nmlx5-core
```

To remove the modules, you must run the command in the same order as shown in the example above.

11. Reboot the server.

### 4.3.4 Firmware Programming

1. Download the VMware bootable binary images v4.6.0 from the [Firmware Tools \(MFT\) site](#).
  - a. ESXi 6.5 File: mft-4.6.0.48-10EM-650.0.0.4598673.x86\_64.vib
  - b. MD5SUM: 0804cffe30913a7b4017445a0f0adbe1
2. Install the image according to the steps described in the [MFT User Manual](#).

The following procedure requires custom boot image downloading, mounting and booting from a USB device.

## 4.4 Linux Driver Installation

This section describes how to install and test the MLNX\_OFED for Linux package on a single server with a ConnectX-5 adapter card installed.

### 4.4.1 Prerequisites

Requirements	Description
Platforms	A server platform with one of the following NVIDIA adapters installed: <ul style="list-style-type: none"><li>• ConnectX@-5 Ex (VPI, IB, EN) (firmware:fw-ConnectX5)</li><li>• ConnectX@-5 (VPI, IB, EN) (firmware:fw-ConnectX5)</li></ul>
Required Disk Space for Installation	1GB
Operating System	Linux operating system. For the list of supported operating system distributions and kernels, please refer to the <i>MLNX_OFED Release Notes</i>
Installer Privileges	The installation requires administrator (root) privileges on the target machine.

### 4.4.2 Downloading NVIDIA OFED

1. Verify that the system has an NVIDIA network adapter installed.

The following example shows a system with an installed NVIDIA adapter card:

```
# lspci -v | grep Mellanox
86:00.0 Network controller [0207]: Mellanox Technologies MT27620 Family
      Subsystem: Mellanox Technologies Device 0014
86:00.1 Network controller [0207]: Mellanox Technologies MT27620 Family
      Subsystem: Mellanox Technologies Device 0014
```

For Linux driver installation, please refer to [NVIDIA DOCA Installation Guide for Linux](#).

## 4.5 Windows Driver Installation

For Windows, download and install the latest WinOF-2 for Windows software package available via the NVIDIA website at: [WinOF-2 webpage](#). Follow the installation instructions included in the download package (also available from the download page).

The snapshots in the following sections are presented for illustration purposes only. The installation interface may slightly vary, depending on the operating system in use.

### 4.5.1 Software Requirements

For the full list of supported operating systems, please refer to the [WinOF-2 Documentation](#) -> Release Notes.

## 4.5.2 Downloading WinOF-2 Driver



To download the .exe file according to your Operating System, please follow the steps below:

1. Obtain the machine architecture.
  - a. To go to the Start menu, position your mouse in the bottom-right corner of the Remote Desktop of your screen.
  - b. Open a CMD console (Click Task Manager-->File --> Run new task and enter CMD).
  - c. Enter the following command.

```
echo %PROCESSOR_ARCHITECTURE%
```



On an x64 (64-bit) machine, the output will be “AMD64”.

2. Go to the WinOF-2 web page at: <https://www.nvidia.com/en-us/networking/> > Products > Software > InfiniBand Drivers (Learn More) > Nvidia WinOF-2.
3. Download the .exe image according to the architecture of your machine (see [Step 1](#)). The name of the .exe is in the following format: MLNX\_WinOF2-<version>\_<arch>.exe.



Installing the incorrect .exe file is prohibited. If you do so, an error message will be displayed.  
For example, if you install a 64-bit .exe on a 32-bit machine, the wizard will display the following (or a similar) error message: “The installation package is not supported by this processor type. Contact your vendor”

## 4.5.3 Installing WinOF-2 Driver

The snapshots in the following sections are for illustration purposes only. The installation interface may slightly vary, depending on the used operating system.

This section provides instructions for two types of installation procedures, and both require administrator privileges:

- [Attended Installation](#)  
An installation procedure that requires frequent user intervention.
- [Unattended Installation](#)  
An automated installation procedure that requires no user intervention.

### 4.5.3.1 Attended Installation

The following is an example of an installation session.

1. Double click the .exe and follow the GUI instructions to install MLNX\_WinOF2.
2. [Optional] Manually configure your setup to contain the logs option (replace “LogFile” with the relevant directory).


```
MLNX_WinOF2_<revision_version>_All_Arch.exe /v"/1*v* [LogFile]"
```

3. [Optional] If you do not want to upgrade your firmware version (i.e., MT\_SKIPFWUPGRD default value is False).

```
MLNX_WinOF2_<revision_version>_All_Arch.exe /v" MT_SKIPFWUPGRD=1"
```

4. [Optional] If you do not want to install the Rshim driver, run.


```
MLNX_WinOF2_<revision_version>_All_Arch.exe /v" MT_DISABLE_RSHIM_INSTALL=1"
```

 The Rshim driver installation will fail if a prior Rshim driver is already installed. The following fail message will be displayed in the log:  
"ERROR!!! Installation failed due to following errors: MlxRshim drivers installation disabled and MlxRshim drivers Installed, Please remove the following oem inf files from driver store: <oem inf list>"


5. [Optional] If you want to skip the check for unsupported devices, run.

```
MLNX_WinOF2_<revision_version>_All_Arch.exe /v" SKIPUNSUPPORTEDDEVCHECK=1"
```


6. Click Next in the Welcome screen.

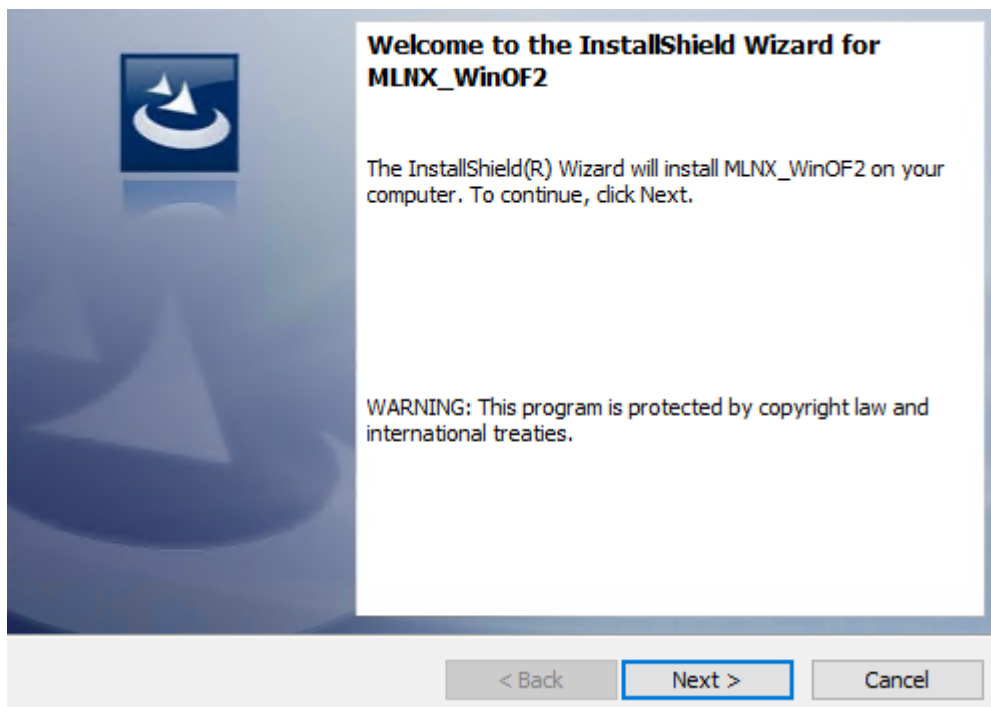


7. Read and accept the license agreement and click Next.

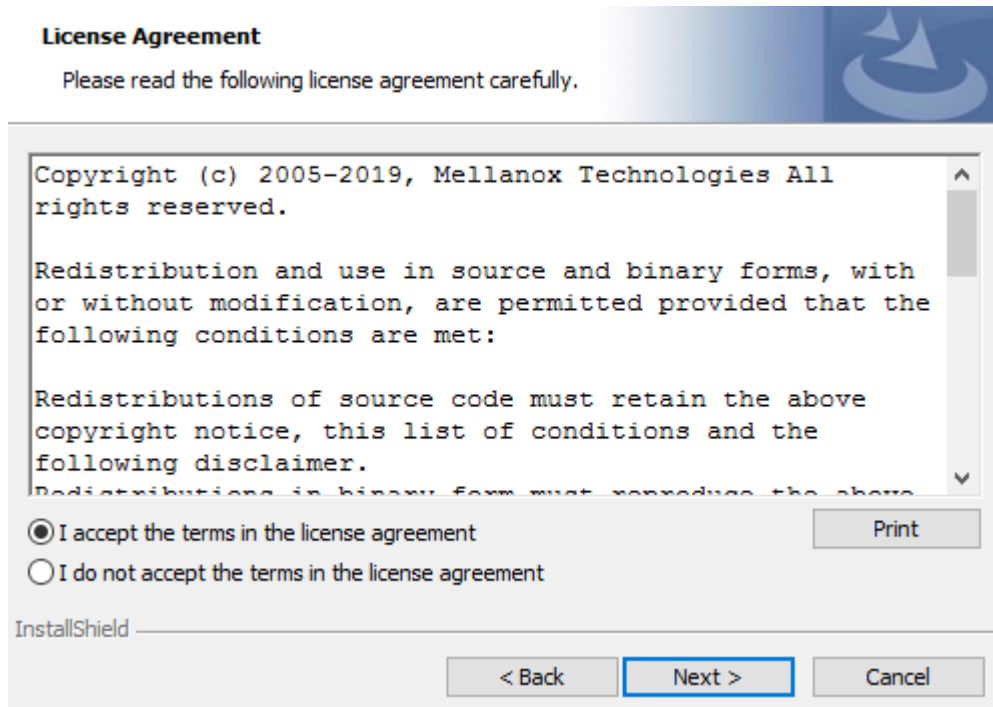


8. Select the target folder for the installation.

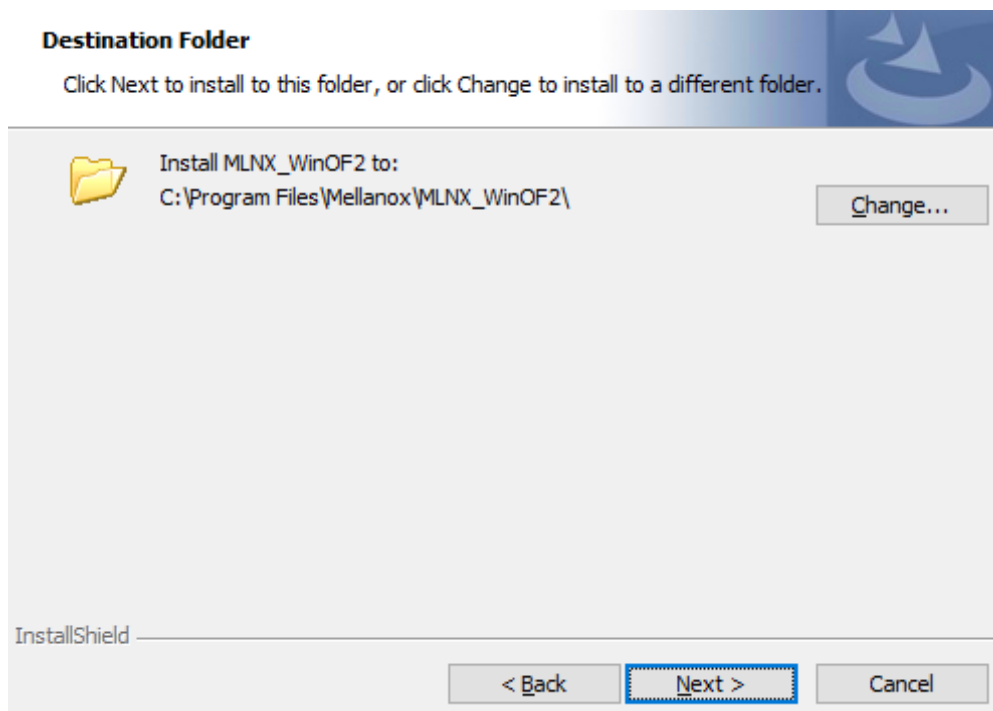

9. The firmware upgrade screen will be displayed in the following cases:
- If the user has an OEM card. In this case, the firmware will not be displayed.
  - If the user has a standard NVIDIA® card with an older firmware version, the firmware will be updated accordingly. However, if the user has both an OEM card and a NVIDIA® card, only the NVIDIA® card will be updated.

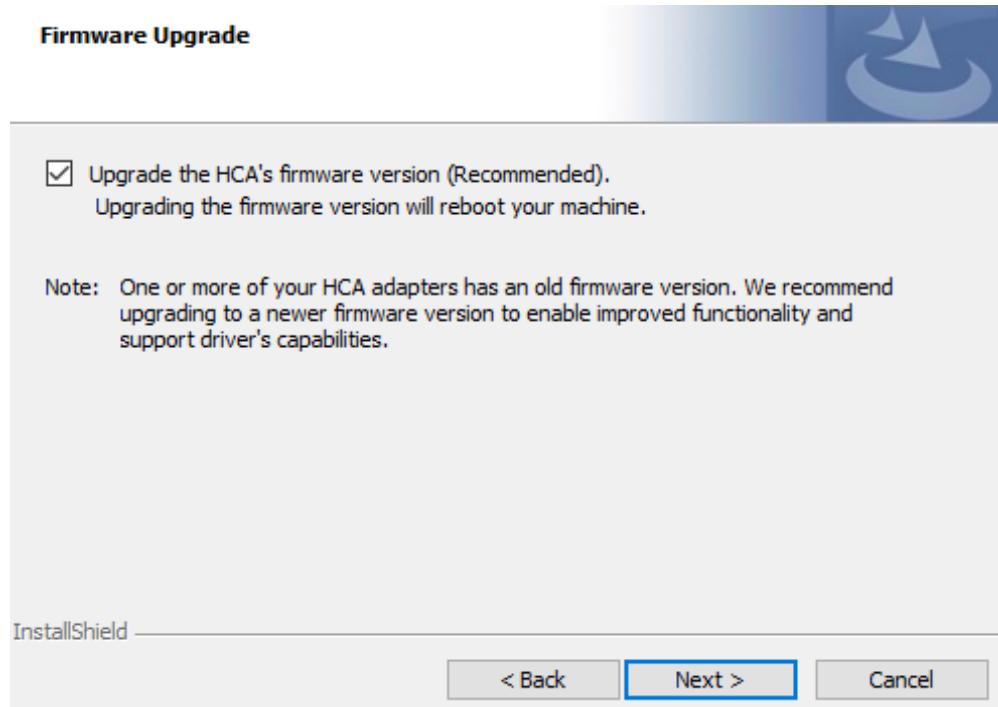


10. Select a Complete or Custom installation, follow [Step a](#) onward.

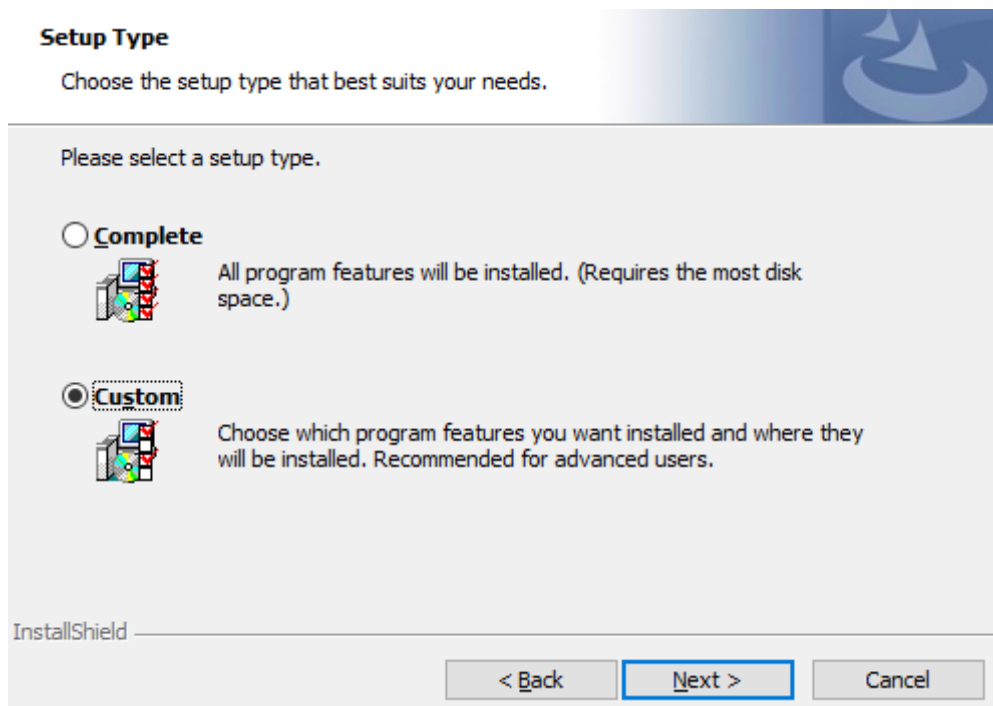



- a. Select the desired feature to install:
- Performances tools - install the performance tools that are used to measure performance in user environment
  - Documentation - contains the User Manual and Release Notes


- Management tools - installation tools used for management, such as mlxstat
  - Diagnostic Tools - installation tools used for diagnostics, such as mlx5cmd
- b. Click Next to install the desired tools.

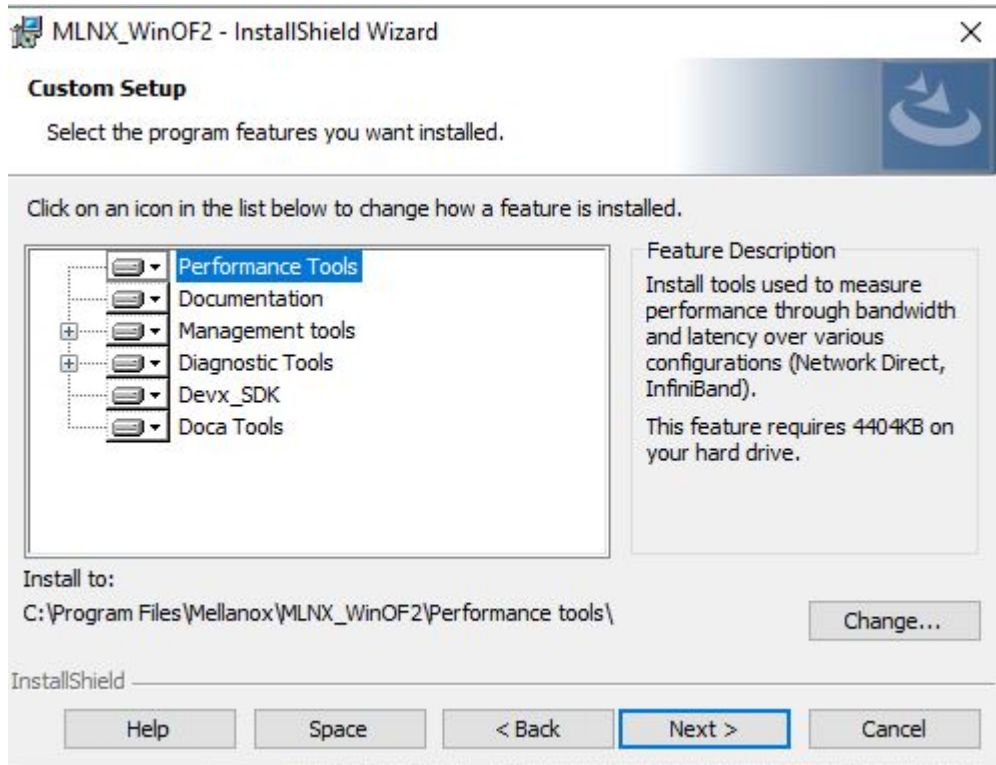


11. Click Install to start the installation.

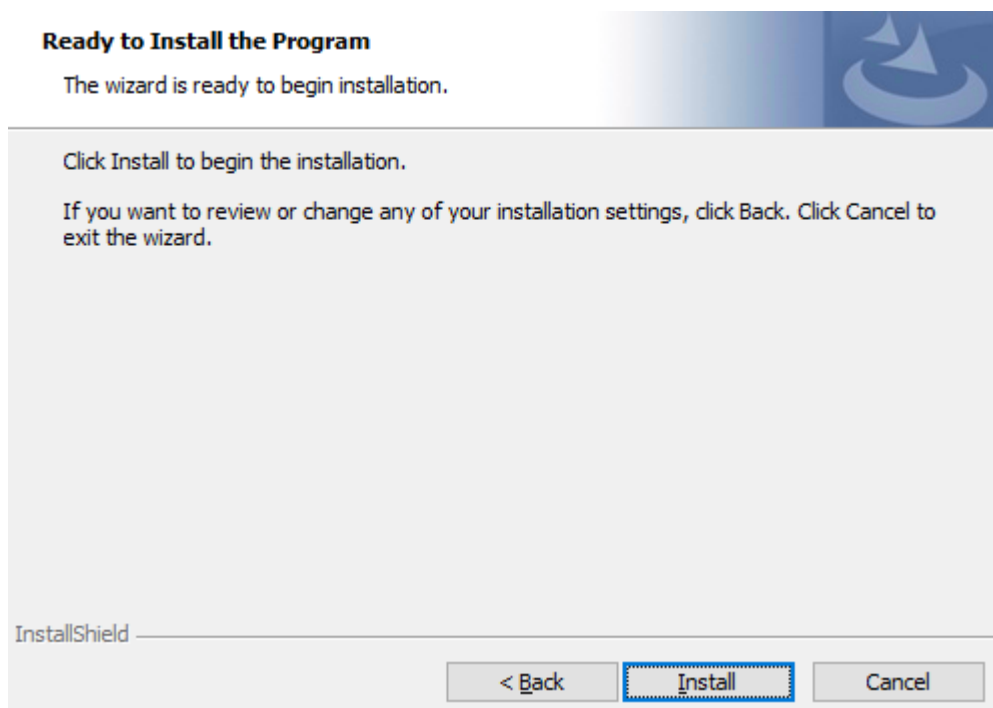

12. In case firmware upgrade option was checked in [Step 7](#), you will be notified if a firmware upgrade is required (see .

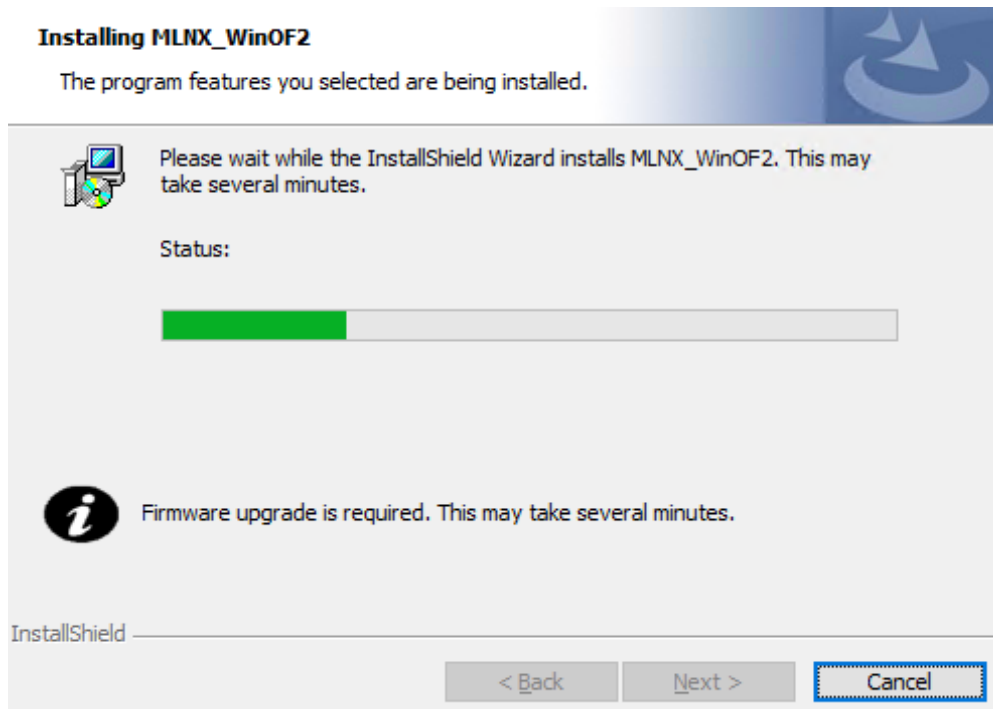

13. Click Finish to complete the installation.

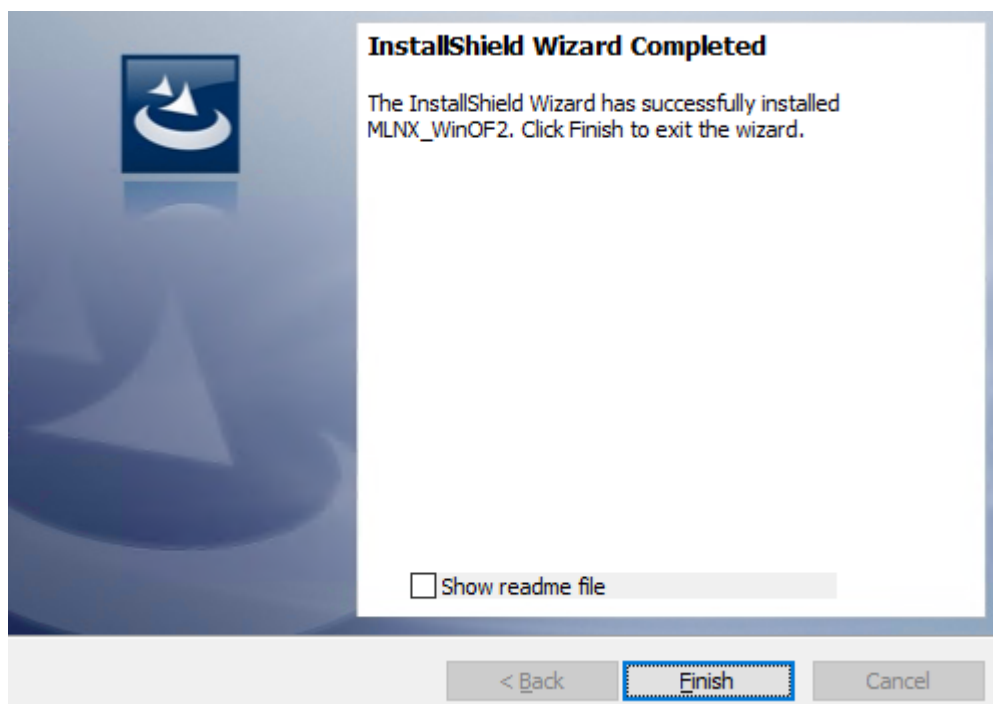

### 4.5.3.2 Unattended Installation



If no reboot options are specified, the installer restarts the computer whenever necessary without displaying any prompt or warning to the user. To control the reboots, use the */norestart* or */forcerestart* standard command-line options.

The following is an example of an unattended installation session.

1. Open a CMD console-> Click Start-> Task Manager File-> Run new task-> and enter CMD.
2. Install the driver. Run:

```
MLNX_WinOF2-[Driver/Version]_<revision_version>_All_Arch.exe /S /v/qn
```

3. [Optional] Manually configure your setup to contain the logs option:

```
MLNX_WinOF2-[Driver/Version]_<revision_version>_All_Arch.exe /S /v/qn /v"/l*vx [LogFile]"
```

4. [Optional] if you wish to control whether to install ND provider or not (i.e., *MT\_NDPROPERTY default value is True*).

```
MLNX_WinOF2-[Driver/Version]_<revision_version>_All_Arch.exe /vMT_NDPROPERTY=1
```

5. [Optional] If you do not wish to upgrade your firmware version (i.e., *MT\_SKIPFWUPGRD default value is False*).

```
MLNX_WinOF2-[Driver/Version]_<revision_version>_All_Arch.exe /vMT_SKIPFWUPGRD=1
```

6. [Optional] If you do not want to install the Rshim driver, run.

```
MLNX_WinOF2_<revision_version>_All_Arch.exe /v" MT_DISABLE_RSHIM_INSTALL=1"
```



The Rshim driver installation will fail if a prior Rshim driver is already installed. The following fail message will be displayed in the log:

```
"ERROR!!! Installation failed due to following errors: MlxRshim drivers installation disabled and MlxRshim drivers Installed, Please remove the following oem inf files from driver store: <oem inf list>"
```

7. [Optional] If you want to enable the default configuration for Rivermax, run.

```
MLNX_WinOF2_<revision_version>_All_Arch.exe /v"MT_RIVERMAX=1 /l*vx C:\Users\<user>\log.txt "
```

8. [Optional] If you want to skip the check for unsupported devices, run/

```
MLNX_WinOF2_<revision_version>_All_Arch.exe /v" SKIPUNSUPPORTEDDEVCHECK=1"
```

## 4.5.4 Firmware Upgrade

If the machine has a standard NVIDIA® card with an older firmware version, the firmware will be automatically updated as part of the NVIDIA® WinOF-2 package installation. For information on how to upgrade firmware manually, please refer to [MFT User Manual](#).

If the machine has a DDA (pass through) facility, firmware update is supported only in the Host. Therefore, to update the firmware, the following must be performed:

1. Return the network adapters to the Host.
2. Update the firmware according to the steps in the [MFT User Manual](#).
3. Attach the adapters back to VM with the DDA tools.

---

## 5 Updating Adapter Firmware

Each card is shipped with the latest version of qualified firmware at the time of manufacturing. However, NVIDIA issues firmware updates occasionally that provide new features and bug fixes. To check that your card is programmed with the latest available firmware version, download the `mlxup` firmware update and query utility. The utility can query for available NVIDIA adapters and indicate which adapters require a firmware update. If the user confirms, `mlxup` upgrades the firmware using embedded images. The latest `mlxup` executable and documentation are available in [mlxup - Update and Query Utility](#).

```
[server1]# ./mlxup
Querying Mellanox devices firmware ...
Device Type: ConnectX-5
Part Number: MCX556A-EDAT
Description: ConnectX@-5 Ex VPI adapter card, EDR IB (100Gb/s) and 100GbE, dual-port
QSFP28, PCIe4.0 x16, tall bracket, ROHS R6
PSID: MT_2190110032
PCI Device Name: 0000:06:00.0
Base GUID: e41d2d0300fd8b8a
Versions: Current Available
FW 16.00.0000 16.00.0000
Status: Up to date
Device Type: ConnectX-5
Part Number: MCX556A-EDAT
Description: ConnectX@-5 Ex VPI adapter card, EDR IB (100Gb/s) and 100GbE, dual-port
QSFP28, PCIe4.0 x16, tall bracket, ROHS R6
PSID: MT_2170110021
PCI Device Name: 0000:07:00.0
Base MAC: 0000e41d2da206d4
Versions: Current Available
FW 16.00.0000 16.00.0000
Status: Update required
Perform FW update? [y/N]: y
Device #1: Up to date
Device #2: Updating FW ... Done
Restart needed for updates to take effect.
Log File: /var/log/mlxup/mlxup-yyyyymmdd.log
```

## 6 Troubleshooting

### 6.1 General Troubleshooting

<b>Server unable to find the adapter</b>	<ul style="list-style-type: none"><li>• Ensure that the adapter is placed correctly</li><li>• Make sure the adapter slot and the adapter are compatible Install the adapter in a different PCI Express slot</li><li>• Use the drivers that came with the adapter or download the latest</li><li>• Make sure your motherboard has the latest BIOS</li><li>• Try to reboot the server</li></ul>
<b>The adapter no longer works</b>	<ul style="list-style-type: none"><li>• Reseat the adapter in its slot or a different slot, if necessary</li><li>• Try using another cable</li><li>• Reinstall the drivers for the network driver files may be damaged or deleted</li><li>• Reboot the server</li></ul>
<b>Adapters stopped working after installing another adapter</b>	<ul style="list-style-type: none"><li>• Try removing and re-installing all adapters</li><li>• Check that cables are connected properly</li><li>• Make sure your motherboard has the latest BIOS</li></ul>
<b>Link indicator light is off</b>	<ul style="list-style-type: none"><li>• Try another port on the switch</li><li>• Make sure the cable is securely attached</li><li>• Check you are using the proper cables that do not exceed the recommended lengths</li><li>• Verify that your switch and adapter port are compatible</li></ul>
<b>Link light is on, but with no communication established</b>	<ul style="list-style-type: none"><li>• Check that the latest driver is loaded</li><li>• Check that both the adapter and its link are set to the same speed and duplex settings</li></ul>
<b>Event message received of insufficient power</b>	<ul style="list-style-type: none"><li>• When [ adapter's current power consumption ] &gt; [ PCIe slot advertised power limit ] - a warning message appears in the server's system even logs (Eg. dmesg: "Detected insufficient power on the PCIe slot")</li><li>• It's recommended to use a PCIe slot that can supply enough power.</li><li>• If a message of the following format appears - "mlx5_core 0003:01:00.0: port_module:254:(pid 0): Port module event[error]: module 0, Cable error, One or more network ports have been powered down due to insufficient/unadvertised power on the PCIe slot" please upgrade your Adapter's firmware.</li><li>• If the message remains - please consider switching from Active Optical Cable (AOC) or transceiver to Direct Attached Copper (DAC) connectivity.</li></ul>

### 6.2 Linux Troubleshooting

<b>Environment Information</b>	<pre>cat /etc/issue uname -a cat /proc/cupinfo   grep 'model name'   uniq ofed_info -s ifconfig -a ip link show ethtool &lt;interface&gt; ethtool -i &lt;interface_of_Mellanox_port_num&gt; ibdev2netdev</pre>
--------------------------------	--

<b>Card Detection</b>	<code>lspci   grep -i Mellanox</code>
<b>Mellanox Firmware Tool (MFT)</b>	Download and install MFT: <a href="#">MFT Documentation</a> Refer to the User Manual for installation instructions. Once installed, run: <code>mst start</code> <code>mst status</code> <code>flint -d &lt;mst_device&gt; q</code>
<b>Ports Information</b>	<code>ibstat</code> <code>ibv_devinfo</code>
<b>Firmware Version Upgrade</b>	To download the latest firmware version, refer to the <a href="#">NVIDIA Update and Query Utility</a> .
<b>Collect Log File</b>	<code>cat /var/log/messages</code> <code>dmesg &gt;&gt; system.log</code> <code>journalctl</code> (Applicable on new operating systems) <code>cat /var/log/syslog</code>

## 6.3 Windows Troubleshooting

<b>Environment Information</b>	From the Windows desktop choose the Start menu and run: <code>msinfo32</code> To export system information to a text file, choose the Export option from the File menu. Assign a file name and save.
<b>Mellanox Firmware Tool (MFT)</b>	Download and install MFT: <a href="#">MFT Documentation</a> Refer to the User Manual for installation instructions. Once installed, open a CMD window and run: <code>WinMFT</code> <code>mst start</code> <code>mst status</code> <code>flint -d &lt;mst_device&gt; q</code>
<b>Ports Information</b>	<code>vstat</code>
<b>Firmware Version Upgrade</b>	Download the latest firmware version using the PSID/board ID from <a href="#">here</a> . <code>flint -d &lt;mst_device&gt; -i &lt;firmware_bin_file&gt; b</code>
<b>Collect Log File</b>	<ul style="list-style-type: none"> <li>• Event log viewer</li> <li>• MST device logs: <ul style="list-style-type: none"> <li>• <code>mst start</code></li> <li>• <code>mst status</code></li> </ul> </li> <li>• <code>flint -d &lt;mst_device&gt; dc &gt; dump_configuration.log</code></li> <li>• <code>mstdump &lt;mst_device&gt; dc &gt; mstdump.log</code></li> </ul>

# 7 Specifications

## 7.1 MCX555A-ECAT Specifications

<b>Physical</b>	Size: 2.71 in. x 5.6 in. (68.90mm x 142.24 mm) - low profile		
	Connector: Single QSFP28 InfiniBand and Ethernet (copper and optical)		
<b>Protocol Support</b>	InfiniBand: IBTA v1.3 <sup>a</sup> Auto-Negotiation: 1X/2X/4X SDR (2.5Gb/s per lane), DDR (5Gb/s per lane), QDR (10Gb/s per lane), FDR10 (10.3125Gb/s per lane), FDR (14.0625Gb/s per lane), EDR (25Gb/s per lane) port		
	Ethernet: 100GBASE-CR4, 100GBASE-KR4, 100GBASE-SR4, 50GBASE-R2, 50GBASE-R4, 40GBASE-CR4, 40GBASE-KR4, 40GBASE-SR4, 40GBASE-LR4, 40GBASE-ER4, 40GBASE-R2, 25GBASE-R, 20GBASE-KR2, 10GBASE-LR, 10GBASE-ER, 10GBASE-CX4, 10GBASE-CR, 10GBASE-KR, SGMII, 100GBASE-CX, 100GBASE-KX, 10GBASE-SR		
	Data Rate	InfiniBand	SDR/DDR/QDR/FDR/EDR
		Ethernet	1/10/25/40/50/100 Gb/s
PCI Express Gen3: SERDES @ 8.0GT/s, 16 lanes (2.0 and 1.1 compatible)			
<b>Power</b>	Voltage: 12V		
	<b>Power</b>	<b>Cable</b>	
	Typical Power <sup>b</sup>	Passive Cables	14.2W
	Maximum Power	Passive Cables	17.0W
		1.5W Active Cables	18.6W
		2.5W Active Cables	19.7W
Maximum power available through QSFP28 port: 5W			
<b>Environmental</b>	<b>Temperature</b>	Operational	0 °C to 55 °C
		Non-operational	-40 °C to 70 °C <sup>c</sup>
	<b>Humidity</b>	Operational	10% to 85% relative humidity
		Non-operational	10% to 90% relative humidity
<b>Altitude (Operational)</b>	3050m		
<b>Airflow</b>	<a href="#">Airflow Specifications</a>		
<b>Regulatory</b>	Safety: CB / cTUVus / CE		
	EMC: CE / FCC / VCCI / ICES / RCM		
	RoHS compliant		

<sup>a</sup> The ConnectX-5 adapters supplement the IBTA auto-negotiation specification to get better bit error rates and longer cable reaches. This supplemental feature only initiates when connected to another NVIDIA InfiniBand product.

<sup>b</sup> Typical power for ATIS traffic load.

<sup>c</sup> The non-operational storage temperature specifications apply to the product without its package.

## 7.2 MCX556A-ECAT/MCX556A-ECUT Specifications

<b>Physical</b>	Size: 2.71 in. x 5.6 in. (68.90mm x 142.24 mm) - low profile		
	Connector: Dual QSFP28 InfiniBand and Ethernet (copper and optical)		
<b>Protocol Support</b>	InfiniBand: IBTA v1.3 <sup>a</sup> Auto-Negotiation: 1X/2X/4X SDR (2.5Gb/s per lane), DDR (5Gb/s per lane), QDR (10Gb/s per lane), FDR10 (10.3125Gb/s per lane), FDR (14.0625Gb/s per lane), EDR (25Gb/s per lane) port		
	Ethernet: 100GBASE-CR4, 100GBASE-KR4, 100GBASE-SR4, 50GBASE-R2, 50GBASE-R4, 40GBASE-CR4, 40GBASE-KR4, 40GBASE-SR4, 40GBASE-LR4, 40GBASE-ER4, 40GBASE-R2, 25GBASE-R, 20GBASE-KR2, 10GBASE-LR, 10GBASE-ER, 10GBASE-CX4, 10GBASE-CR, 10GBASE-KR, SGMII, 1000BASE-CX, 1000BASE-KX, 10GBASE-SR		
	Data Rate	InfiniBand	SDR/DDR/QDR/FDR/EDR
		Ethernet	1/10/25/40/50/100 Gb/s
	PCI Express Gen3: SERDES @ 8.0GT/s, 16 lanes (2.0 and 1.1 compatible) Note: PCIe 3.0 x16 bus can supply a maximum bandwidth of 128Gb/s only (=16 * 8GT/s, including overhead), and therefore cannot support 200Gb/s when both network ports of MCX556A-ECAT run at 100Gb/s.		
<b>Power</b>	Voltage: 12V		
		<b>Power</b>	<b>Cable</b>
	Typical Power <sup>b</sup>	Passive Cables	16.2W
	Maximum Power	Passive Cables	19.0W
		1.5 Active Cables	22.3W
		2.5W Active Cables	24.6W
Maximum power available through QSFP28 port: 5W			
<b>Environmental</b>	<b>Temperature</b>	Operational	0°C to 55°C
		Non-operational	-40°C to 70°C <sup>c</sup>
	<b>Humidity</b>	Operational	10% to 85% relative humidity
		Non-operational	10% to 90% relative humidity
	<b>Altitude (Operational)</b>	3050m	
<b>Airflow</b>	<a href="#">Airflow Specifications</a>		
<b>Regulatory</b>	Safety: CB / cTUVus / CE		
	EMC: CE / FCC / VCCI / ICES / RCM		
	RoHS compliant		

Notes: <sup>a</sup> The ConnectX-5 adapters supplement the IBTA auto-negotiation specification to get better bit error rates and longer cable reaches. This supplemental feature only initiates when connected to another NVIDIA InfiniBand product.

<sup>b</sup> Typical power for ATIS traffic load.

<sup>c</sup> The non-operational storage temperature specifications apply to the product without its package.

## 7.3 MCX556A-EDAT Specifications

<b>Physical</b>	Size: 2.71 in. x 5.6 in. (68.90mm x 142.24 mm) - low profile		
	Connector: Dual QSFP28 InfiniBand and Ethernet (copper and optical)		
<b>Protocol Support</b>	InfiniBand: IBTA v1.3 <sup>a</sup> Auto-Negotiation: 1X/2X/4X SDR (2.5Gb/s per lane), DDR (5Gb/s per lane), QDR (10Gb/s per lane), FDR10 (10.3125Gb/s per lane), FDR (14.0625Gb/s per lane), EDR (25Gb/s per lane) port		
	Ethernet: 100GBASE-CR4, 100GBASE-KR4, 100GBASE-SR4, 50GBASE-R2, 50GBASE-R4, 40GBASE-CR4, 40GBASE-KR4, 40GBASE-SR4, 40GBASE-LR4, 40GBASE-ER4, 40GBASE-R2, 25GBASE-R, 20GBASE-KR2, 10GBASE-LR, 10GBASE-ER, 10GBASE-CX4, 10GBASE-CR, 10GBASE-KR, SGMII, 1000BASE-CX, 1000BASE-KX, 10GBASE-SR		
	Data Rate	InfiniBand	SDR/DDR/QDR/FDR/EDR
		Ethernet	1/10/25/40/50/100 Gb/s
	PCI Express Gen4: SERDES @ 16.0GT/s, 16 lanes (2.0 and 1.1 compatible)		
<b>Power</b>	Voltage: 12V		
	<b>Power</b>		<b>Cable</b>
	Typical Power <sup>b</sup>	Passive Cables	19.3W
	Maximum Power	Passive Cables	23.4W
		1.5W Active Cables	26.8W
		2.5W Active Cables	29.0W
Maximum power available through QSFP28 port: 5W			
<b>Environmental</b>	<b>Temperature</b>	Operational	0°C to 55°C
		Non-operational	-40°C to 70°C <sup>c</sup>
	<b>Humidity</b>	Operational	10% to 85% relative humidity
		Non-operational	10% to 90% relative humidity
	<b>Altitude (Operational)</b>	3050m	
<b>Airflow</b>	<a href="#">Airflow Specifications</a>		
<b>Regulatory</b>	Safety: CB / cTUVus / CE		
	EMC: CE / FCC / VCCI / ICES / RCM		
	RoHS: RoHS-R6		

Notes: <sup>a</sup> The ConnectX-5 adapters supplement the IBTA auto-negotiation specification to get better bit error rates and longer cable reaches. This supplemental feature only initiates when connected to another NVIDIA InfiniBand product.

<sup>b</sup> Typical power for ATIS traffic load.

<sup>c</sup> The non-operational storage temperature specifications apply to the product without its package.

## 7.4 Airflow Specifications

Cable Type	Airflow (LFM) Airflow Direction - Heatsink to Port				
	Passive	Active 1.5W	Active 2.5W	Active 3.5W	Active 5W
MCX555A-ECAT	300	350	400	400	950
MCX556A-EC[A/U]T	350	500	600	650	1300
MCX556A-EDAT	400	600	850	1000	1400

## 7.5 LED Specifications

See [LED Interface](#).

## 7.6 Board Mechanical Drawings and Dimensions



All dimensions are in millimeters. The PCB mechanical tolerance is +/- 0.13mm.

### 7.6.1 Adapter Card Mechanical Drawing (Component Side)



e

### 7.6.2 Bracket Mechanical Drawing



All dimensions are in millimeters. The bracket mechanical tolerance is +/- 0.25mm.



---

## 8 Monitoring

The adapter card incorporates the ConnectX IC, which operates in the range of temperatures between 0C and 105C.

There are three thermal threshold definitions that impact the overall system operation state:

- Warning - 105°C: On managed systems only: When the device crosses the 105°C threshold, a Warning Threshold message will be issued by the management SW, indicating to system administration that the card has crossed the Warning threshold. Note that this temperature threshold does not require nor lead to any action by hardware (such as adapter card shutdown).
- Critical - 115°C: When the device crosses this temperature, the firmware will automatically shut down the device.
- Emergency - 130°C: If the firmware fails to shut down the device upon crossing the Critical threshold, the device will auto-shutdown upon crossing the Emergency (130°C) threshold.

The card's thermal sensors can be read through the system's SMBus. The user can read these thermal sensors and adapt the system airflow in accordance with the readouts and the needs of the above-mentioned IC thermal requirements.

 
---

## 9 Finding the GUID\_MAC and Serial Number on the Adapter Card


Each NVIDIA adapter card has a different identifier printed on the label: serial number and the card MAC for the Ethernet protocol and the card GUID for the InfiniBand protocol. VPI cards have both a GUID and a MAC (derived from the GUID).

**i** The product revisions indicated on the labels in the following figures do *not* necessarily represent the latest revisions of the cards.

### 9.1 MCX555A-ECAT board label example:




## 9.2 MCX556A-ECAT board label example

 

## 9.3 MCX556A-ECUT board label example:



 **9.4 MCX556A-EDAT board label example:**



---

## 10 Document Revision History

Date	Description of Changes
May. 2023	Added non-operational storage temperature specifications.
Sep. 2022	Added a note concerning FRU EEPROM memory component under the Features and Benefits table.
Jan. 2021	<ul style="list-style-type: none"><li>• Updated PCIe spec fields under "Specifications" page</li><li>• Updated LED Interface</li></ul>
Feb. 2020	Added altitude criteria to "Specifications" page
Jan. 2020	Added MCX556A-ECUT to relevant sections
Oct. 2019	Updated Ethernet supported protocols
Apr. 2019	<ul style="list-style-type: none"><li>• Added a note to "Features and Benefits"</li></ul>
Dec. 2018	<ul style="list-style-type: none"><li>• Migrated to on-line format; minor reorganization</li></ul>
Jul. 2018	<ul style="list-style-type: none"><li>• Updated Adapter Card LED Operations</li></ul>
Jan. 2018	<ul style="list-style-type: none"><li>• Updated LED Operation</li><li>• Added a note to Hardware Requirements</li></ul>
Nov. 2017	<ul style="list-style-type: none"><li>• Updated Adapter Card LED Operations</li></ul>
Oct. 2017	<ul style="list-style-type: none"><li>• Updated the following specification tables of : MCX555A-ECAT, MCX556A-ECAT, MCX556A-EDAT</li><li>• Updated Linux Driver Installation</li></ul>
Apr. 2017	<ul style="list-style-type: none"><li>• Updated Product Overview</li><li>• Updated Installation Instructions</li></ul>
Mar. 2017	First release

## Notice

This document is provided for information purposes only and shall not be regarded as a warranty of a certain functionality, condition, or quality of a product. Neither NVIDIA Corporation nor any of its direct or indirect subsidiaries and affiliates (collectively: "NVIDIA") make any representations or warranties, expressed or implied, as to the accuracy or completeness of the information contained in this document and assumes no responsibility for any errors contained herein. NVIDIA shall have no liability for the consequences or use of such information or for any infringement of patents or other rights of third parties that may result from its use. This document is not a commitment to develop, release, or deliver any Material (defined below), code, or functionality.

NVIDIA reserves the right to make corrections, modifications, enhancements, improvements, and any other changes to this document, at any time without notice. Customer should obtain the latest relevant information before placing orders and should verify that such information is current and complete.

NVIDIA products are sold subject to the NVIDIA standard terms and conditions of sale supplied at the time of order acknowledgement, unless otherwise agreed in an individual sales agreement signed by authorized representatives of NVIDIA and customer ("Terms of Sale"). NVIDIA hereby expressly objects to applying any customer general terms and conditions with regards to the purchase of the NVIDIA product referenced in this document. No contractual obligations are formed either directly or indirectly by this document.

NVIDIA products are not designed, authorized, or warranted to be suitable for use in medical, military, aircraft, space, or life support equipment, nor in applications where failure or malfunction of the NVIDIA product can reasonably be expected to result in personal injury, death, or property or environmental damage. NVIDIA accepts no liability for inclusion and/or use of NVIDIA products in such equipment or applications and therefore such inclusion and/or use is at customer's own risk.

NVIDIA makes no representation or warranty that products based on this document will be suitable for any specified use. Testing of all parameters of each product is not necessarily performed by NVIDIA. It is customer's sole responsibility to evaluate and determine the applicability of any information contained in this document, ensure the product is suitable and fit for the application planned by customer, and perform the necessary testing for the application in order to avoid a default of the application or the product. Weaknesses in customer's product designs may affect the quality and reliability of the NVIDIA product and may result in additional or different conditions and/or requirements beyond those contained in this document. NVIDIA accepts no liability related to any default, damage, costs, or problem which may be based on or attributable to: (i) the use of the NVIDIA product in any manner that is contrary to this document or (ii) customer product designs.

No license, either expressed or implied, is granted under any NVIDIA patent right, copyright, or other NVIDIA intellectual property right under this document. Information published by NVIDIA regarding third-party products or services does not constitute a license from NVIDIA to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property rights of the third party, or a license from NVIDIA under the patents or other intellectual property rights of NVIDIA.

Reproduction of information in this document is permissible only if approved in advance by NVIDIA in writing, reproduced without alteration and in full compliance with all applicable export laws and regulations, and accompanied by all associated conditions, limitations, and notices.

THIS DOCUMENT AND ALL NVIDIA DESIGN SPECIFICATIONS, REFERENCE BOARDS, FILES, DRAWINGS, DIAGNOSTICS, LISTS, AND OTHER DOCUMENTS (TOGETHER AND SEPARATELY, "MATERIALS") ARE BEING PROVIDED "AS IS." NVIDIA MAKES NO WARRANTIES, EXPRESSED, IMPLIED, STATUTORY, OR OTHERWISE WITH RESPECT TO THE MATERIALS, AND EXPRESSLY DISCLAIMS ALL IMPLIED WARRANTIES OF NONINFRINGEMENT, MERCHANTABILITY, AND FITNESS FOR A PARTICULAR PURPOSE. TO THE EXTENT NOT PROHIBITED BY LAW, IN NO EVENT WILL NVIDIA BE LIABLE FOR ANY DAMAGES, INCLUDING WITHOUT LIMITATION ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, PUNITIVE, OR CONSEQUENTIAL DAMAGES, HOWEVER CAUSED AND REGARDLESS OF THE THEORY OF LIABILITY, ARISING OUT OF ANY USE OF THIS DOCUMENT, EVEN IF NVIDIA HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Notwithstanding any damages that customer might incur for any reason whatsoever, NVIDIA's aggregate and cumulative liability towards customer for the products described herein shall be limited in accordance with the Terms of Sale for the product.

## Trademarks



NVIDIA, the NVIDIA logo, and Mellanox are trademarks and/or registered trademarks of NVIDIA Corporation and/or its affiliates in the U.S. and in other countries. Other company and product names may be trademarks of the respective companies with which they are associated.

Copyright

© 2026 NVIDIA Corporation & affiliates. All Rights Reserved.

